

# **PORTABLE CHAIR SCALES**

BEAM and DIGITAL TYPES MODELS 475, 4751, 6475, 6475k and 6475KGEU



0033-M128-O1 Rev J 10/12 CARDINAL SCALE MFG. CO. PO Box 151 • Webb City, MO 64870 Ph: 417-673-4631 • Fax: 417-673-5001 www.detectoscale.com

Printed in USA

Technical Support: Ph: 866-254-8261 • techsupport@cardet.com

### FCC COMPLIANCE STATEMENT

WARNING! The 6475 and 6475K generate, use and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures necessary to correct the interference.

All rights reserved. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. While every precaution has been taken in the preparation of this book, we assume no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein. All instructions and diagrams have been checked for accuracy and ease of application; however, success and safety in working with tools depend to a great extent upon the individual accuracy, skill and caution. For this reason, we are not able to guarantee the result of any procedure contained herein. Nor can we assume responsibility for damage to property or injury to persons occasioned from the procedures. Persons engaging the procedures do so entirely at their own risk.

SERIAL NUMBER
DATE OF PURCHASE
PURCHASED FROM
RETAIN THIS INFORMATION FOR FUTURE USE

### UNPACKING INSTRUCTIONS

Remove scale from its packing and inspect it for signs of shipping damage, such as exterior dents and scratches. Keep the carton and packing for return shipment or relocation if it should become necessary. It is the responsibility of the purchaser to file all claims for any damage or loss incurred during transit. If no damage is seen, then remove straps from between base and platform.

### SETUP AND OPERATION

The scale has been assembled at the factory. Refer to Instructions for your model. For digital models also refer to Owner's Manual of the digital indicator for additional information.

To use the scale, set on firm and level surface. Raise armrests and footrest out of your and the patient's way. Assist the patient to a sitting position. Lower the armrests (for patient comfort during weighing). Lower the footrest and have patient place their feet on footrest before weighing. **NOTE:** Patient's feet must be on footrest during weighing operation. After weighing the patient, raise arms and footrest out of the way and assist the patient out of the chair.




**CAUTION!** This scale is not intended for patient transport.

#### **475 AND 4751** To balance scale, move both poises to B zero (0) and turn balance

screw to right or


left until scale balances.

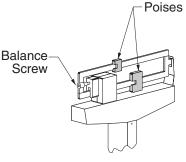

### 6475, 6475K and 6475KGEU

Press **ON/OFF** key to turn display on. With the display on, press the **ZERO** key to zero the weight display. Set patient on the scale as described above. When weight is stable, press the **LOCK/RELEASE** key to lock on to the weight. Note that weight value will be flashing. Read the patient weight. Remove patient from the scale and press **LOCK/RELEASE** key to unlock the display and prepare for the next weighing operation or press **ON/OFF** key to turn display off.

## MODELS 475 AND 4751 REPLACEMENT PART IDENTIFICATION

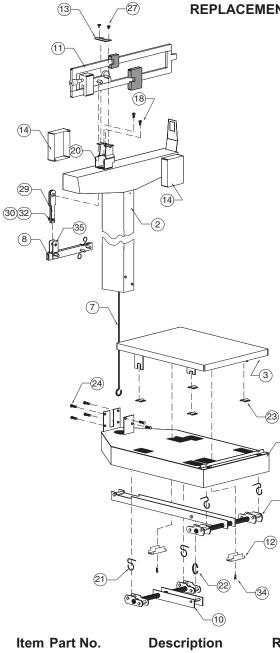


RTIDENTIFICATION							
ltem Req'd		Part No.	Descr	iption			
	6024-0033	#10 Helical Spli Lock Washer	t	2			
18	6021-0988	#10-32 x 1/2 He Head Screw	X	2			
19*	6013-0277	#10-32 Square	Nut	2			
20	3P1008	Beam Yoke		1			
21	3P8059	Union Hanger		4			
22	2U58	Union Center H	anger	1			
23	3P2087	Platform Bearing	g	4			
24	6021-1102	1/4-20 x 1/2"		6			
		Truss Head Scr	ew				
25*	6024-1027	1/4 Ext Tooth		6			
		Lock Washer					
26*	63K1038	Base Leg		4			
27	6021-0670	#6 x 1/4 Hex He Sheet Metal Scr		2			
28*	650RC7	Flatwasher		2			
29	3P8034	Beam Hanger S	Side	2			
30	6028-0105	Pin		2			
32*	6009-5095	Cotter Bow-Tie	Pin	4			
34	6021-1629	#10 x 1/2 Hex H Sheet Metal Scr		2			
35	0033-B334-08	Hanger					

\*Not Shown


1

(9)

		-(10)	
ltem	Part No.	Description	Req'd
1	3P5001X	Base Weldment	1
2	0033-D243-0A	Headpiece and	1
		Column Weldment	
3	3P4011X	Platform Weldment	1
4	3P4408X-1	Complete Chair Ass	y 1
4B	0033-C178-0A	Chair Seat Only	1
4C	3P4412	Arm Rests	2
5	3P3408X	Base Stand	1
7	0033-B335-08	Draft Rod	1
8	0033-C369-0A	Shelf Lever w/Pivot	1
9	3P8002X	Long Lever Assy	1
10	3P8003X	Short Lever Assy	1
11	0033-B220-1A	Beam 400 lb	1
	0033-B226-1A	Beam 400 lb/175 kg	1
12	3P60	Check Plate	2
13	3P41	Reading Beam	1
		Retainer	
14	0033-C236-18	Beam Cover	2

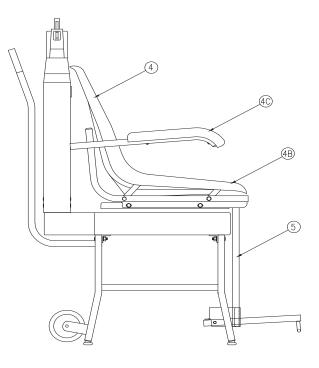

## MODELS 6475, 6475K AND 6475KGEU REPLACEMENT PART IDENTIFICATION

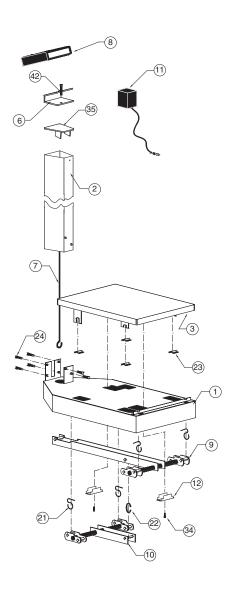

1   3P5001X   Base Weldment   1     2   430XGR804   Column Weldment   1     3   3P4011X   Platform Weldment   1     3   3P4011X   Platform Weldment   1     6   0033-B164-08   Bracket-758CSV   1     0033-B438-0A   Bracket-750   1     7   0033B255-08   Draft Rod   1     8   758CSV   Indicator   1     9   3P8002X   Long Lever Assy   1     10   3P8003X   Short Lever Assy   1     11   6800-1045   Optional Power   1     9   3P8059   Union Hanger   4     21   3P60   Check Plate   2     21   3P8059   Union Center   1     Hanger   1/4-20 x 1/2"   6   1/4-20 x 1/2"     23*   3P2087   Platform Bearing   4     24   6021-1102   1/4-20 x 1/2"   6     25*   6024-1027   1/4 Ext Tooth   6     Lock Washer   1   Lock Washer   1	ltem	Part No.	Description	Req'd
3     3P4011X     Platform Weldment     1       6     0033-B164-08     Bracket-758CSV     1       0033-B438-0A     Bracket-750     1       7     0033B255-08     Draft Rod     1       8     758CSV     Indicator     1       9     3P8002X     Long Lever Assy     1       10     3P8003X     Short Lever Assy     1       11     6800-1045     Optional Power     1       11     6800-1045     Optional Power     1       11     6800-1045     Union Hanger     4       22     2VDC @ 1A     1     2       12     3P60     Check Plate     2       21     3P8059     Union Hanger     4       22     2U58     Union Center     1       Hanger     1/4-20 x 1/2"     6     1/4-20 x 1/2"       25*     6024-1027     1/4 Ext Tooth     6       Lock Washer     2     Sht Metal Screw     35       35     0033-B104-0A     Top Plate     1 <td>1</td> <td>3P5001X</td> <td>Base Weldment</td> <td>1</td>	1	3P5001X	Base Weldment	1
6     0033-B164-08     Bracket-758CSV     1       7     0033B255-08     Draft Rod     1       8     758CSV     Indicator     1       9     3P8002X     Long Lever Assy     1       10     3P8003X     Short Lever Assy     1       11     6800-1045     Optional Power     1       11     6800-1045     Optional Power     1       12     3P60     Check Plate     2       21     3P8059     Union Hanger     4       22     2U58     Union Center     1       Hanger     1/4-20 x 1/2"     6     6       23*     3P2087     Platform Bearing     4       24     6021-1102     1/4-20 x 1/2"     6       25*     6024-1027     1/4 Ext Tooth     6       Lock Washer     2     Sht Metal Screw     2       35     0033-B104-0A     Top Plate     1       40*     6024-0033     #10 Helical Split     2       Lock Washer     1     Lock Washer				•
$\begin{array}{cccccccccccccccccccccccccccccccccccc$				
7   0033B255-08   Draft Rod   1     8   758CSV   Indicator   1     9   3P8002X   Long Lever Assy   1     10   3P8003X   Short Lever Assy   1     11   6800-1045   Optional Power   1     11   6800-1045   Optional Power   1     12   3P60   Check Plate   2     21   3P8059   Union Hanger   4     22   2U58   Union Center   1     Hanger	6			
750   Indicator   1     9   3P8002X   Long Lever Assy   1     10   3P8003X   Short Lever Assy   1     11   6800-1045   Optional Power   1     11   6800-1045   Optional Power   1     11   6800-1045   Optional Power   1     12   3P60   Check Plate   2     21   3P8059   Union Hanger   4     22   2U58   Union Center   1     Hanger   22   2U58   Union Center   1     23*   3P2087   Platform Bearing   4     24   6021-1102   1/4-20 x 1/2"   6     Truss Head Screw   2   2   5   6024-1027   1/4 Ext Tooth   6     Lock Washer   2   %   8ase Leg   4   4     34   6021-1629   #10 x 1/2 Hex Hd   2   2     35   0033-B104-0A   Top Plate   1   40*   6024-0033   #10 Helical Split   2     42   6021-1454   1/4-20 x 3/4 Hex   1   Head Screw </td <td></td> <td></td> <td></td> <td></td>				
9   3P8002X   Long Lever Assy   1     10   3P8003X   Short Lever Assy   1     11   6800-1045   Optional Power   1     11   6800-1045   Optional Power   1     11   6800-1045   Optional Power   1     12   3P60   Check Plate   2     21   3P8059   Union Hanger   4     22   2U58   Union Center   1     Hanger   23*   3P2087   Platform Bearing   4     24   6021-1102   1/4-20 x 1/2"   6   6     Lock Washer   25*   6024-1027   1/4 Ext Tooth   6     25*   6024-1027   1/4 Ext Tooth   6   6     26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     Lock Washer   1   Lock Washer   1     42   6021-1454   1/4-20 x 3/4 Hex   1	8			
10   3P8003X   Short Lever Assy   1     11   6800-1045   Optional Power   1     Supply   100-240 VAC /   12 VDC @ 1A     12   3P60   Check Plate   2     21   3P8059   Union Hanger   4     22   2U58   Union Center   1     23*   3P2087   Platform Bearing   4     24   6021-1102   1/4-20 x 1/2"   6     Truss Head Screw   25*   6024-1027   1/4 Ext Tooth   6     Lock Washer   2   5   6024-1027   1/4 Ext Tooth   6     26*   63K1038   Base Leg   4   4     34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     Lock Washer   1   Lock Washer   1     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     45*   0033-B110-08   UHMW Disk   1				
11   6800-1045   Optional Power   1     Supply   100-240 VAC /   12 VDC @ 1A     12   3P60   Check Plate   2     21   3P8059   Union Hanger   4     22   2U58   Union Center   1     Hanger   4   22   2U58   Union Center   1     23*   3P2087   Platform Bearing   4   4     24   6021-1102   1/4-20 x 1/2"   6   6     25*   6024-1027   1/4 Ext Tooth   6   6     26*   63K1038   Base Leg   4   4     34   6021-1629   #10 x 1/2 Hex Hd   2   Sht Metal Screw     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     Lock Washer   1   Lock Washer   1     42   6021-1454   1/4-20 x 3/4 Hex   1     46*   709G2R1206   Load Cell Assy   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic				
Supply   100-240 VAC /     12   3P60     Check Plate   2     21   3P8059   Union Hanger     22   2U58   Union Center   1     Hanger   12   3P2087   Platform Bearing   4     24   6021-1102   1/4-20 x 1/2"   6   6     25*   6024-1027   1/4 Ext Tooth   6   6     26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd   2     Sht Metal Screw   35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2   2     Lock Washer   1   Lock Washer   1     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1	-		, i i i i i i i i i i i i i i i i i i i	
100-240 VAC /     12 VDC @ 1A     12 3P60   Check Plate   2     21 3P8059   Union Hanger   4     22 2U58   Union Center   1     Hanger   12   3P2087   Platform Bearing   4     24 6021-1102   1/4-20 x 1/2"   6   6   6     25* 6024-1027   1/4 Ext Tooth   6   6   6     26* 63K1038   Base Leg   4   4     34 6021-1629   #10 x 1/2 Hex Hd   2   Sht Metal Screw     35   0033-B104-0A   Top Plate   1     40* 6024-0033   #10 Helical Split   2   Lock Washer     42   6021-1454   1/4-20 x 3/4 Hex   1     45* 0033-B110-08   UHMW Disk   1     46* 709G2R1206   Load Cell Assy   1     47* 391RV204   1/4-20 Elastic   1     48* 6024-0004   Washer Flat 1/4   1	11	6800-1045	•	1
12   3P60   Check Plate   2     21   3P8059   Union Hanger   4     22   2U58   Union Center   1     23*   3P2087   Platform Bearing   4     24   6021-1102   1/4-20 x 1/2"   6     25*   6024-1027   1/4 Ext Tooth   6     26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1				
12   3P60   Check Plate   2     21   3P8059   Union Hanger   4     22   2U58   Union Center   1     23*   3P2087   Platform Bearing   4     24   6021-1102   1/4-20 x 1/2"   6     25*   6024-1027   1/4 Ext Tooth   6     26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1				
21   3P8059   Union Hanger   4     22   2U58   Union Center   1     Hanger   4     23*   3P2087   Platform Bearing   4     24   6021-1102   1/4-20 x 1/2"   6     Truss Head Screw   6   1     25*   6024-1027   1/4 Ext Tooth   6     26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     Lock Washer   1   Lock Washer   1     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     350   Nut   1   48*   6024-0004				
22   2U58   Union Center Hanger   1     23*   3P2087   Platform Bearing 1/4-20 x 1/2"   4     24   6021-1102   1/4-20 x 1/2"   6     25*   6024-1027   1/4 Ext Tooth Lock Washer   6     26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd Sht Metal Screw   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     Lock Washer   1   Lock Washer   1     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1				2
Hanger     23*   3P2087   Platform Bearing   4     24   6021-1102   1/4-20 x 1/2"   6     Truss Head Screw   7   1/4 Ext Tooth   6     25*   6024-1027   1/4 Ext Tooth   6     26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     Lock Washer   2   Lock Washer   2     42   6021-1454   1/4-20 x 3/4 Hex   1     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1			0	
23*   3P2087   Platform Bearing   4     24   6021-1102   1/4-20 x 1/2"   6     Truss Head Screw   7   1/4 Ext Tooth   6     25*   6024-1027   1/4 Ext Tooth   6     26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     Lock Washer   2   Lock Washer   1     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1	22	2058		1
24   6021-1102   1/4-20 x 1/2"   6     Truss Head Screw   7   1/4 Ext Tooth   6     25*   6024-1027   1/4 Ext Tooth   6     26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     Lock Washer   2   Lock Washer   2     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1	0.0+	00007	•	
25*   6024-1027   1/4 Ext Tooth Lock Washer   6     26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd 2   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1				•
25*   6024-1027   1/4 Ext Tooth Lock Washer   6     26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     42   6021-1454   1/4-20 x 3/4 Hex   1     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1	24	6021-1102		6
26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1	05*	6004 1007		c
26*   63K1038   Base Leg   4     34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1	25	0024-1027		0
34   6021-1629   #10 x 1/2 Hex Hd   2     35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1	26*	63K1038		4
35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1			0	
35   0033-B104-0A   Top Plate   1     40*   6024-0033   #10 Helical Split   2     Lock Washer   1   Lock Washer   1     42   6021-1454   1/4-20 x 3/4 Hex   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1	04	0021 1020		2
40*   6024-0033   #10 Helical Split   2     Lock Washer   2   Lock Washer   1     42   6021-1454   1/4-20 x 3/4 Hex   1     Head Screw   45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     Stop Nut   48*   6024-0004   Washer Flat 1/4   1	35	0033-B104-0A		1
Lock Washer       42     6021-1454     1/4-20 x 3/4 Hex     1       Head Screw     45*     0033-B110-08     UHMW Disk     1       46*     709G2R1206     Load Cell Assy     1       47*     391RV204     1/4-20 Elastic     1       48*     6024-0004     Washer Flat 1/4     1				-
42   6021-1454   1/4-20 x 3/4 Hex   1     Head Screw   1   1     45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     5top Nut   1   1   1     48*   6024-0004   Washer Flat 1/4   1		00210000		-
45*   0033-B110-08   Head Screw   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     48*   6024-0004   Washer Flat 1/4   1	42	6021-1454		1
45*   0033-B110-08   UHMW Disk   1     46*   709G2R1206   Load Cell Assy   1     47*   391RV204   1/4-20 Elastic   1     5top Nut   Stop Nut   1   1     48*   6024-0004   Washer Flat 1/4   1				-
47*     391RV204     1/4-20 Elastic     1       Stop Nut     348*     6024-0004     Washer Flat 1/4     1	45*	0033-B110-08		1
47*     391RV204     1/4-20 Elastic     1       Stop Nut     348*     6024-0004     Washer Flat 1/4     1	46*	709G2R1206	Load Cell Assy	1
48* 6024-0004 Washer Flat 1/4 1	47*	391RV204		1
48* 6024-0004 Washer Flat 1/4 1			Stop Nut	
10* 0000 D100 0A Char Dista Assu	48*	6024-0004	Washer Flat 1/4	1
49" 0033-B122-0A Stop Plate Assy	49*	0033-B122-0A	Stop Plate Assy	1

\*Not Shown

# STATEMENT OF LIMITED WARRANTY

Detecto Scale warrants its equipment to be free from defects in material and workmanship as follows: Detecto warrants to the original purchaser only that it will repair or replace any part of equipment which is defective in material or workmanship for a period of one **(1) year** from date of shipment. Detecto shall be the sole judge of what constitutes a defect.

During the **first ninety (90) days** Detecto may choose to supply all necessary replacement parts and service during normal weekday working hours at no charge to the buyer.

After the first ninety (90) days Detecto will supply parts and service at the job site provided the owner agrees to pay the Dealer for all travel time, including mileage and test equipment, as well as any expenses incurred over the direct labor of the technician at the job site. This limited warranty honors only labor performed by Detecto authorized dealers.

This warranty does not apply to peripheral equipment not manufactured by Detecto; this equipment will be covered by certain manufacturer's warranty only.

This warranty does not include replacement of expendable or consumable parts. This does not apply to any item which has deteriorated or damaged due to wear, accident, misuse, abuse, improper line voltage, overloading, theft, lightning, fire, water or acts of God, or due to extended storage or exposure while in purchaser's possession. This warranty does not apply to maintenance service. Purchased parts will have a ninety (90) day repair or replacement warranty only.

Detecto may require components be returned to the factory; they must be properly packed and shipping charges prepaid. A return authorization number must be obtained for all returns and marked on the outside of all returned packages. Detecto accepts no responsibility for loss or damage in transit.

# STATEMENT OF LIMITED WARRANTY

# **Conditions Which Void Limited Warranty**

This warranty shall not apply to equipment which:

- A.) Has been tampered with, defaced, mishandled or have had repairs and modifications not authorized by Detecto.
- B.) Has had serial number altered, defaced, or removed.
- C.) Has not been grounded according to Detecto's recommended procedure.

# **Freight Carrier Damage**

Claims for equipment damaged in transit must be referred to the freight carrier in accordance with freight carrier regulations.

This warranty sets forth the extent of our liability for breach of any warranty or deficiency in connection with the sale or use of the product. Detecto will not be liable for consequential damages of any nature, including but not limited to, loss of profit, delays or expenses, whether based on tort or contract. Detecto reserves the right to incorporate improvements in material and design without notice and is not obligated to incorporate improvements in equipment previously manufactured.

The foregoing is in lieu of all other warranties, express or implied including any warranty that extends beyond the description of the product including any warranty of merchantability or fitness for a particular purpose. This warranty covers only those Detecto products installed in the forty-eight (48) contiguous continental United States.



Ph. (800) 641-2008 E-mail: detecto@cardet.com 203 E. Daugherty Webb City, MO 64870

02/06 Printed in USA D268-WARRANTY-DET

