


Customers Please Note:

1. The third hole, located at the back of each Arm Pad (B), is optional and can only be accessed using a smaller screwdriver. It will not structurally impact the chair if you choose not to screw in the third hole.

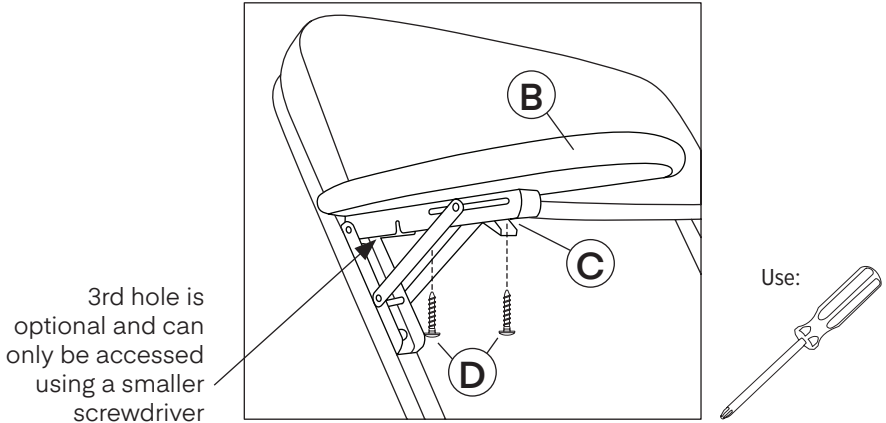

2. To ensure you have the correct Arm Pad (B), the inner point of the Arm Pad (B) should measure 0.12" (3 mm) from the bracket, and the outer point of Arm Pad (B) should measure 0.2" (5 mm) from the bracket.

