


# OPTIONAL BASIC FILE CART END PANELS

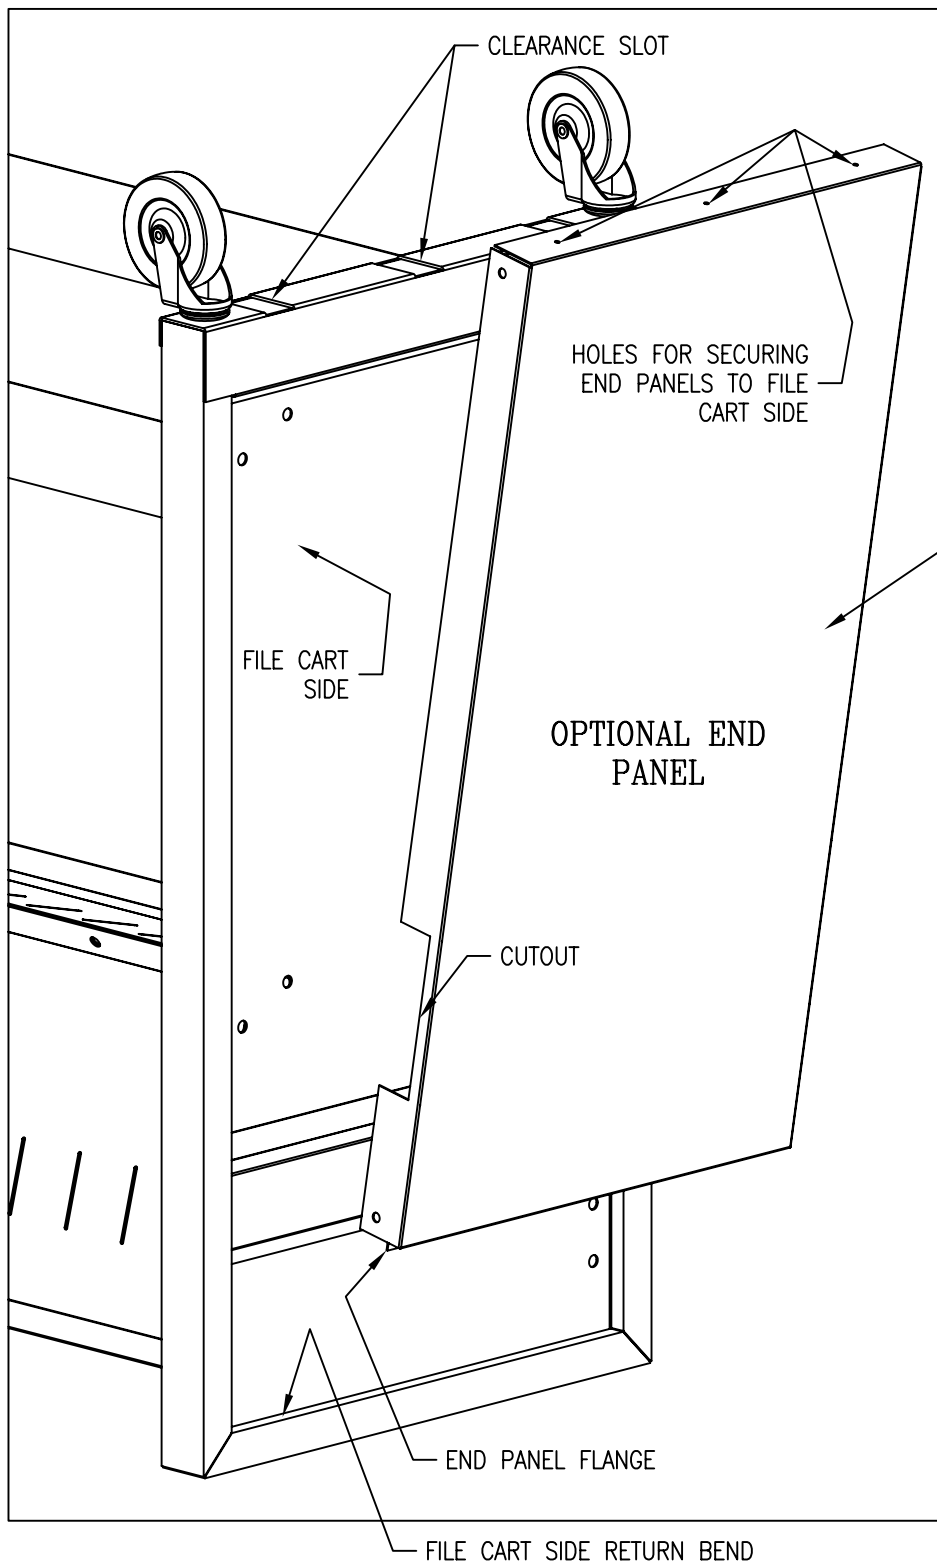

1.) Flip file cart upside down (as shown). Take end panel and with cutout down slide flange on end panel behind return bend on file cart side. Push end panel into file cart side.

2.) Secure end panel to file cart side using (3) #8 x 1/2" sheet metal screws inserted through the clearance slots in file cart side and into end panel.

3.) Repeat steps (1 & 2) for other side of cart.

END PANEL

#8 x 1/2"  
SHEET METAL  
SCREW

