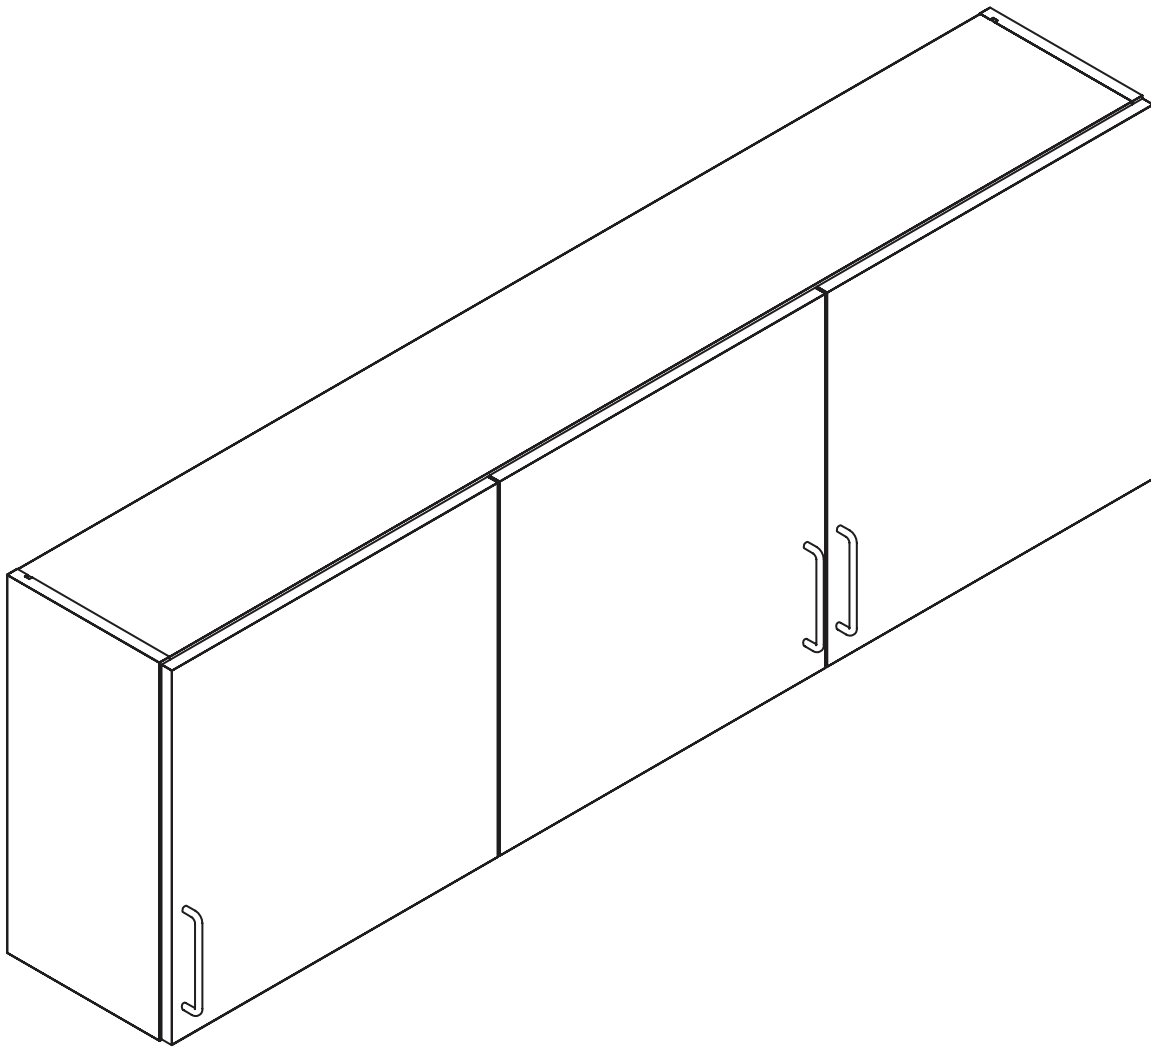


72 INCH WALL CABINET



USER GUIDE

SKU: ADIME902-WALL-72-GRY



Thank you for your purchase.



Viva Comfort maintains a strong practice of ongoing development of products and commercial research.



















We recognize that starting and maintaining a medical practice is expensive. We'll help make the process cost-effective and elegant. Additionally, our team of specialists will ensure everything you need works as efficiently as possible, so you can effectively treat your clients.











Table of Contents

2	Parts List
3	Tools Needed (Not Included)
4	Hardware List
5	Assembly Instructions
17	Warranty

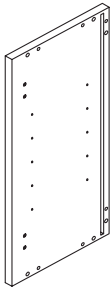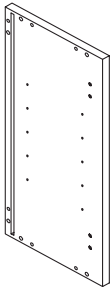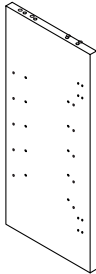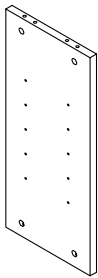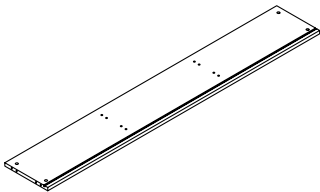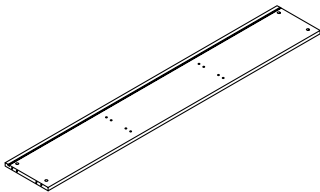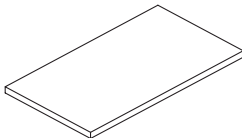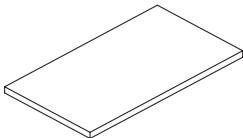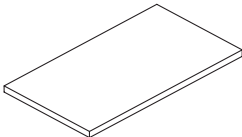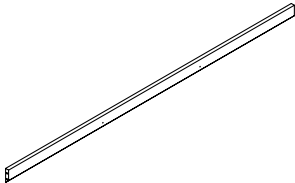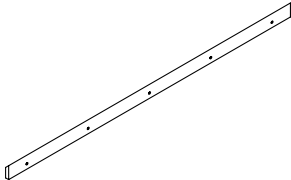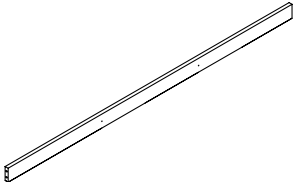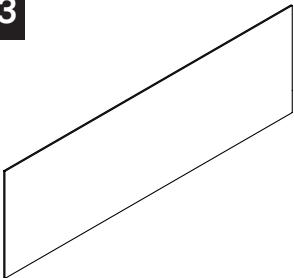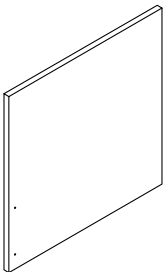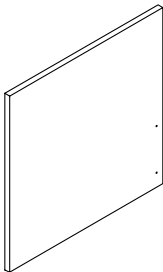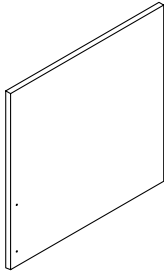
Parts List

1  Left Panel	2  Right Panel	3  Middle Panel 1	4  Middle Panel 2
5  Top Panel	6  Bottom Panel	7  Removable Shelf 1	8  Removable Shelf 2
9  Removable Shelf 3	10  Top Back Rail	11  Center Back Rail	12  Bottom Back Rail
13  Back Panel	10  Right Door 1	11  Left Door	12  Right Door 2

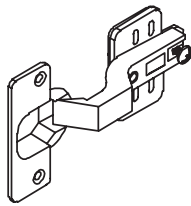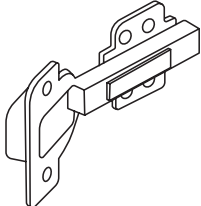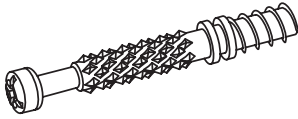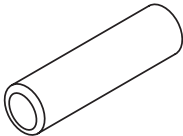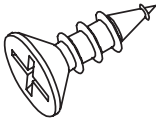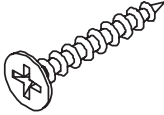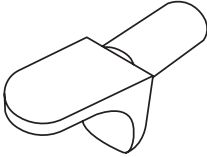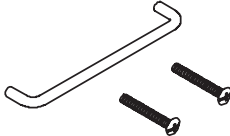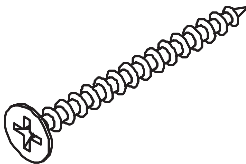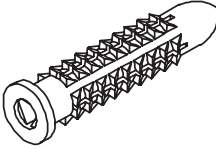Hardware List

A  Hinge 1 (x4)	B  Hinge 2 (x2)	C  Ø15*13mm Cam Lock (x20)	D  Ø8*42mm Cam Lock Bolt (x20)
E  Ø8x30mm Wooden Dowel (x20)	F  Ø4x15mm Wooden Screw (x36)	G  Ø4x30mm Wooden Screw (x4)	H  Shelf Support (x12)
I  Handle (x3) Ø4x22mm Screw (x4)	J  Ø6x70mm Wooden Screw (x5)	K  Plastic Anchors (x5)	L  Sticker (x20)

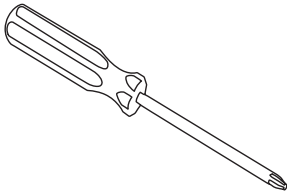Tools Needed (Not Included)



Philips Screwdriver

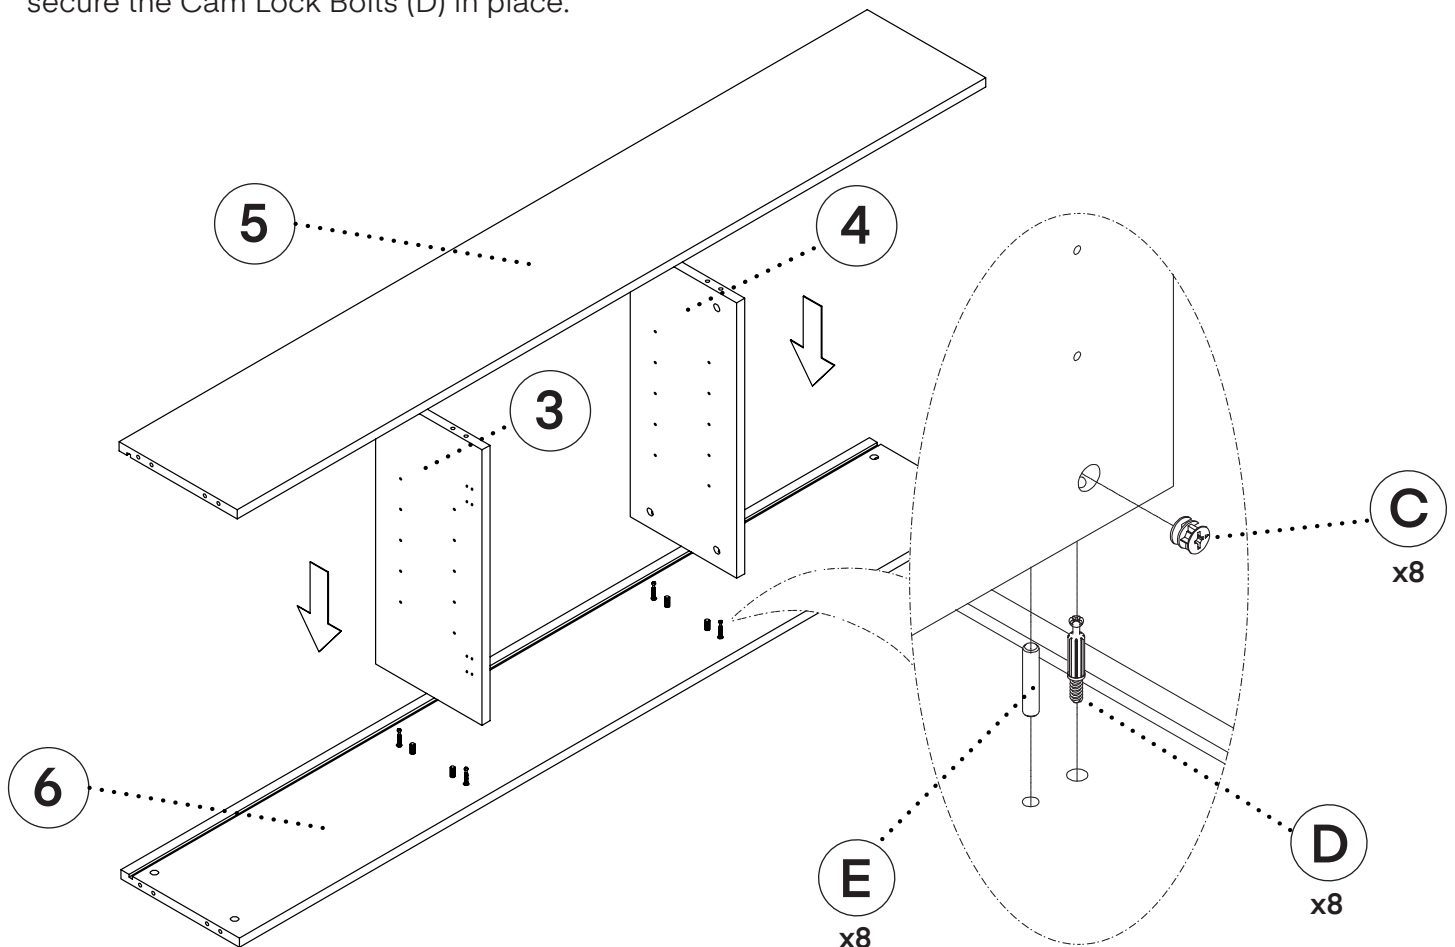
Assembly Instructions

NOTE:

- Before starting, ensure you have an open, clean area to assemble your cabinet.
- Ensure you have all the necessary parts and hardware listed above.
- We highly recommend hiring a professional contractor to assemble and install your cabinet(s).
- Please note, the door's alignments are not interchangeable.


Step 1:

- A.** Before beginning, ensure you have all the parts and hardware listed above for your wall cabinet.
- B.** Locate the Middle Panel 1 (3), Middle Panel 2 (4), the Top Panel (5), the Bottom Panel (6), the Bottom Back Rail (12), the Top Back Rail (10), and Wooden Dowels (E).
- C.** Insert 20 Wooden Dowels (E) into the shorter edges of the Middle Panel 1 (3), and Middle Panel 2 (4), Bottom Panel (6), Top Panel (5), Bottom Back Rail (12), and the Top Back Rail (10).
- a.** Use a rubber mallet to tap the dowels into place gently.
- D.** Insert eight Cam Lock Bolts (D) into the outer, middle holes located on the Top Panel (5) and Bottom Panel (6).
- a.** Use a Phillips head screwdriver to secure the Cam Lock Bolts (D).
- E.** Affix the Middle Panel 1 (3) and Middle Panel 2 (4) to the Top Panel (5) and Bottom Panel (6), as pictured.
- a.** Ensure the etched channel on the Top Panel (5) mirrors the etched channel on Bottom Panel (6).
- F.** Install eight Cam Locks (C) in the Middle Panel 1 (3) and Middle Panel 2 (4), two per side, and turn to secure the Cam Lock Bolts (D) in place.



Step 2:

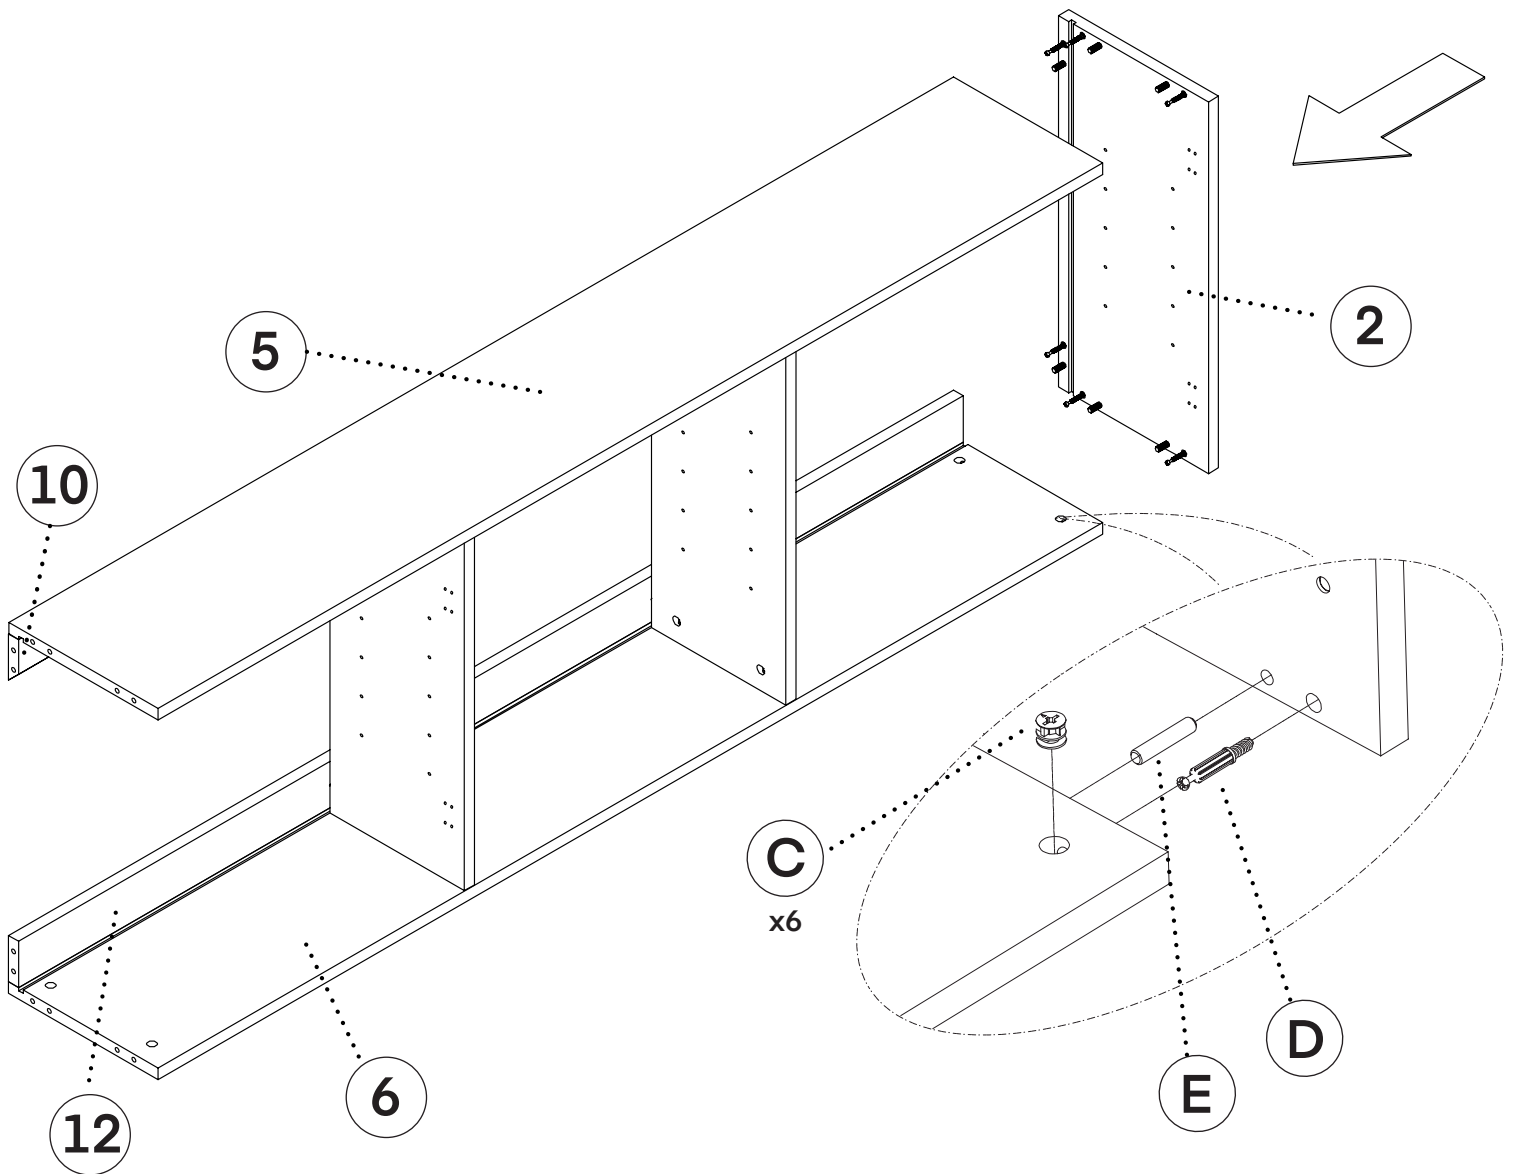- A.** Turn your structure to rest on the Top Panel (5) and Bottom Panel (6) edges.
- B.** Lay the Right Panel (2) on a flat, clean surface.
 - a.** Install six Cam Lock Bolts (D) into three of the edges on the Right Panel (2), as shown.
- C.** Attach the structure you made in Step 1.
 - a.** Gently tap the structure until flush with the Right Panel (2).
- D.** Attach the Bottom Back Rail (12) and the Top Back Rail (10) onto the Right Panel (2), as pictured.
 - a.** Gently tap the structure until flush with the Right Panel (2).
- E.** Install four Cam Locks (C) on the bottom of the Top Panel (5) and the Bottom Panel (6).
 - a.** Turn all the Cam Locks (C) to secure them in place.
- F.** Install two Cam Locks (C) on the bottom of the Bottom Back Rail (12) and the Top Back Rail (10).
- G.** Turn all the Cam Locks (C) to secure them in place.




Step 3:

- A.** Locate the Back Panel (13) and slide it between the etched channels on both the Top Panel (5) and the Bottom Panel (6), as pictured.


Step 4:

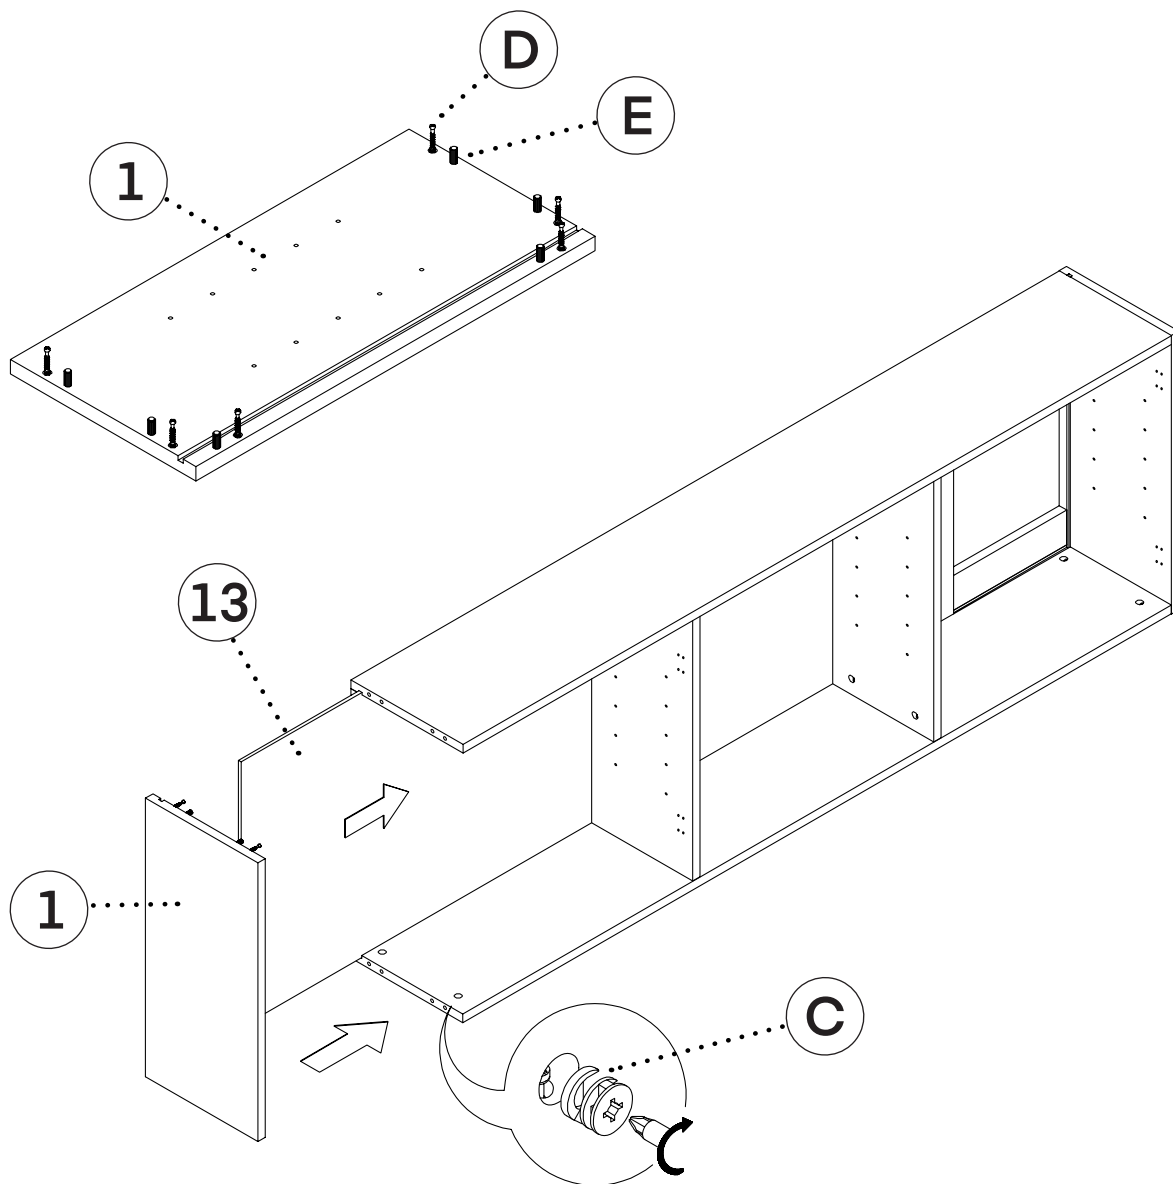- A.** Take the Left Panel (1), and lay it on a flat, clean surface with the predrilled holes facing up.
- B.** Along three of the edges on the Left Panel (1), install six Cam Lock Bolts (D).
- C.** Lift the Left Panel (1) and line the installed hardware up with the predrilled holes on the Top Panel (5), Back Panel (13), Top Back Rail (10), and Bottom Back Rail (12).
- D.** Insert the hardware and push the Left Panel (1) down until it is flush with the rest of the structure.
- E.** Install six Cam Locks (C) on the Top Panel (5), Back Panel (13), Top Back Rail (10), and Bottom Back Rail (12).
- a.** Turn to secure the Cam Lock Bolts (D) in place.




Step 5:

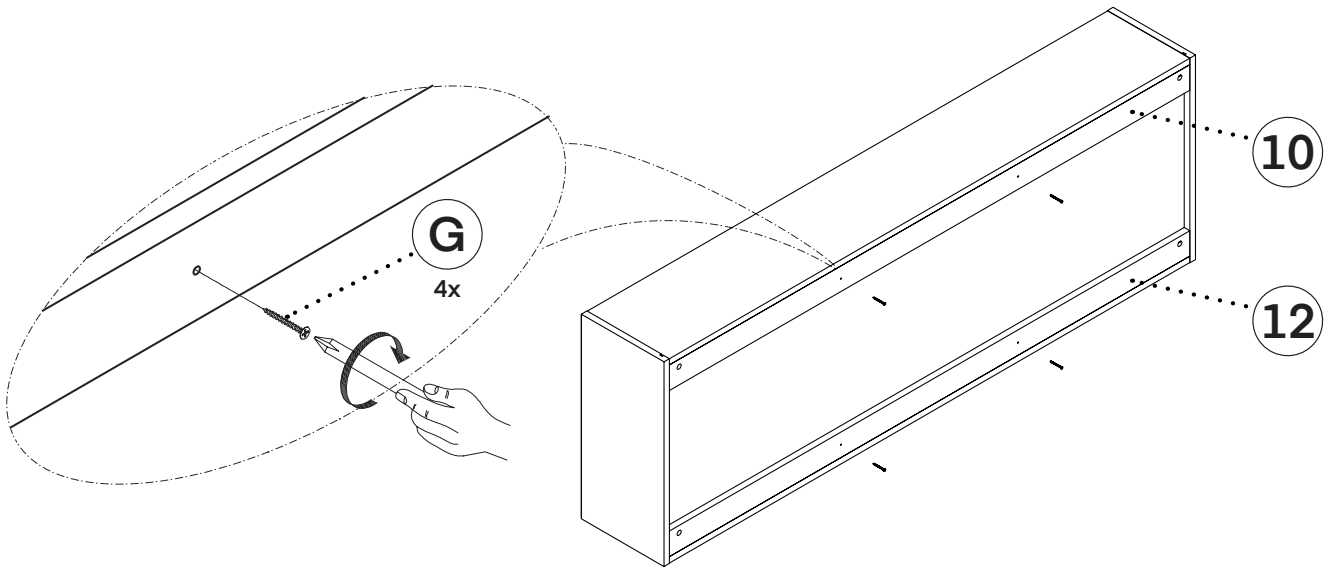- A.** Take two Ø4x30 mm Wooden Screw (G) and secure them to the Top Back Rail (10), as pictured.
- B.** Repeat the above step for the Bottom Back Rail (12), as shown.




Step 6:

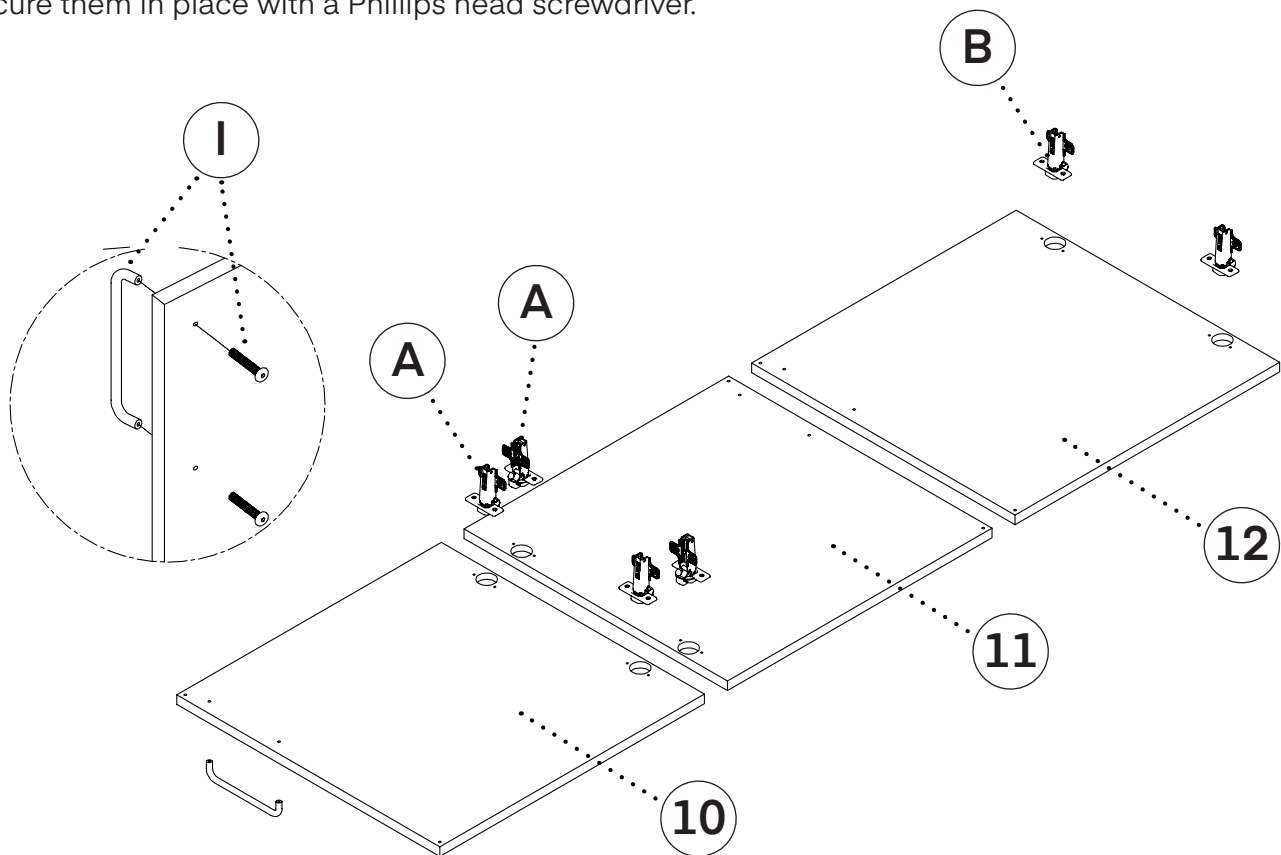- A.** Locate the Hinges (A) and Hinges (B) with included Ø4x15mm Screws (F), the Left Door (11), Right Door 1 (10), and the Right Door 2 (12).
- B.** Adhere the Hinges (A) to the inside of the doors using two Ø4x15mm Screws (F) per hinge, as pictured.
 - a.** Twelve screws total will be used between the three doors.
- C.** Take both Handles (H) and affix them to both doors with their accompanying screws, and thread them through the predrilled holes on the doors.
- D.** Secure them in place with a Phillips head screwdriver.




Step 7:

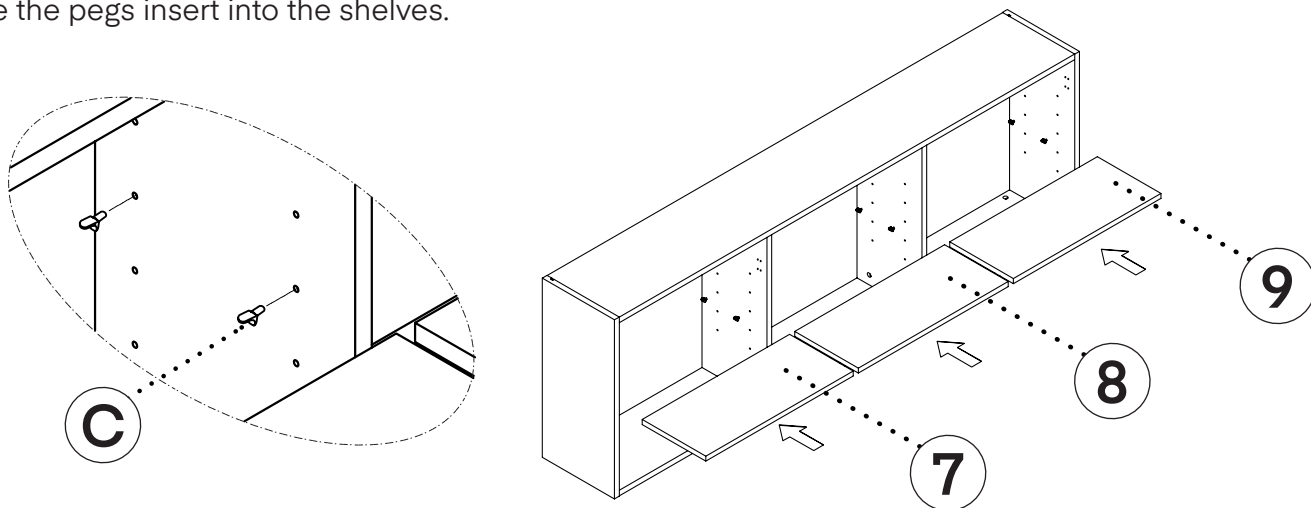- A.** Insert twelve Shelf Supports (H), as pictured, and at your desired height.
- B.** Insert the Removable Shelf 1 (7), Removable Shelf 2 (8), and Removable Shelf 3 (9), as pictured and ensure the pegs insert into the shelves.



Step 8:

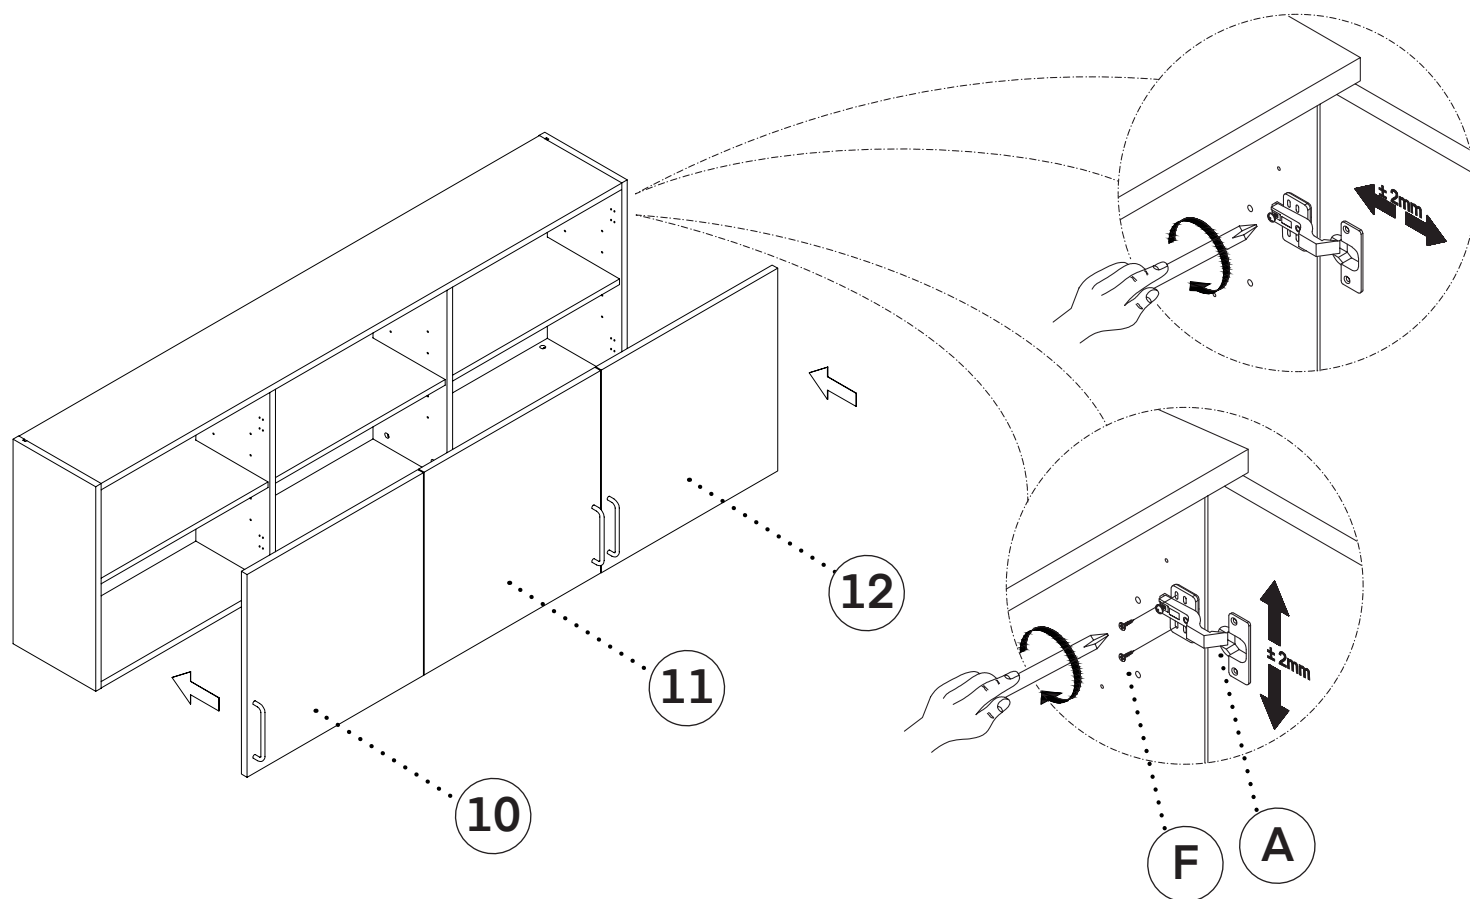
- A.** On the Left Panel (1) and the Right Panel (2), install Hinges (A) with the included two $\text{Ø}4 \times 15\text{mm}$ Screws (F) per Hinge (A), as pictured.
 - a.** Four screws total will be used between the two doors.
- B.** If your doors do not line up, adjust the screws, as shown.
 - a.** Attach the mounting plates to the Hinges (A) with two $\text{Ø}4 \times 15\text{mm}$ Screws (F) per Hinge (A).
- C.** Add Sticker's (L) to cover the Cam Locks (C) on your cabinet.




Hanging Your Wall Cabinet

Using The French Cleat System







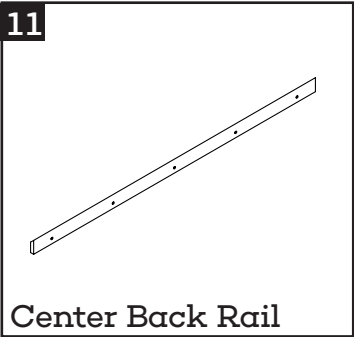
Parts:



Hardware:

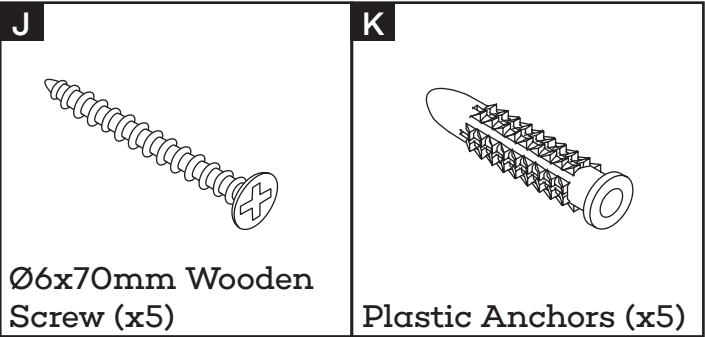


Tools Needed (Not Included):

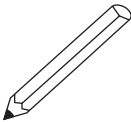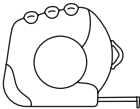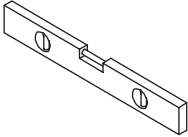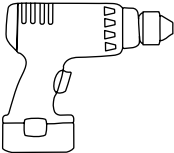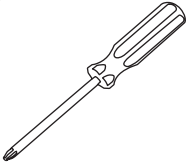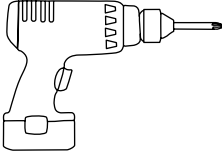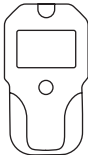 Pencil	 Tape Measure	 3 ft Level	 Drill
 11 mm Drill Bit	 Phillips Head Screwdriver	 Electric Screwdriver	 Stud Finder

- NOTE:**
- Before beginning, locate where exactly you want the Wall Cabinet to be installed.
 - You must find at least one stud to mount the French cleating system into.
 - Make sure you have all the necessary tools listed above prior to beginning.
 - We highly recommend using two people to ensure everything is level and properly installed.


Step 1:

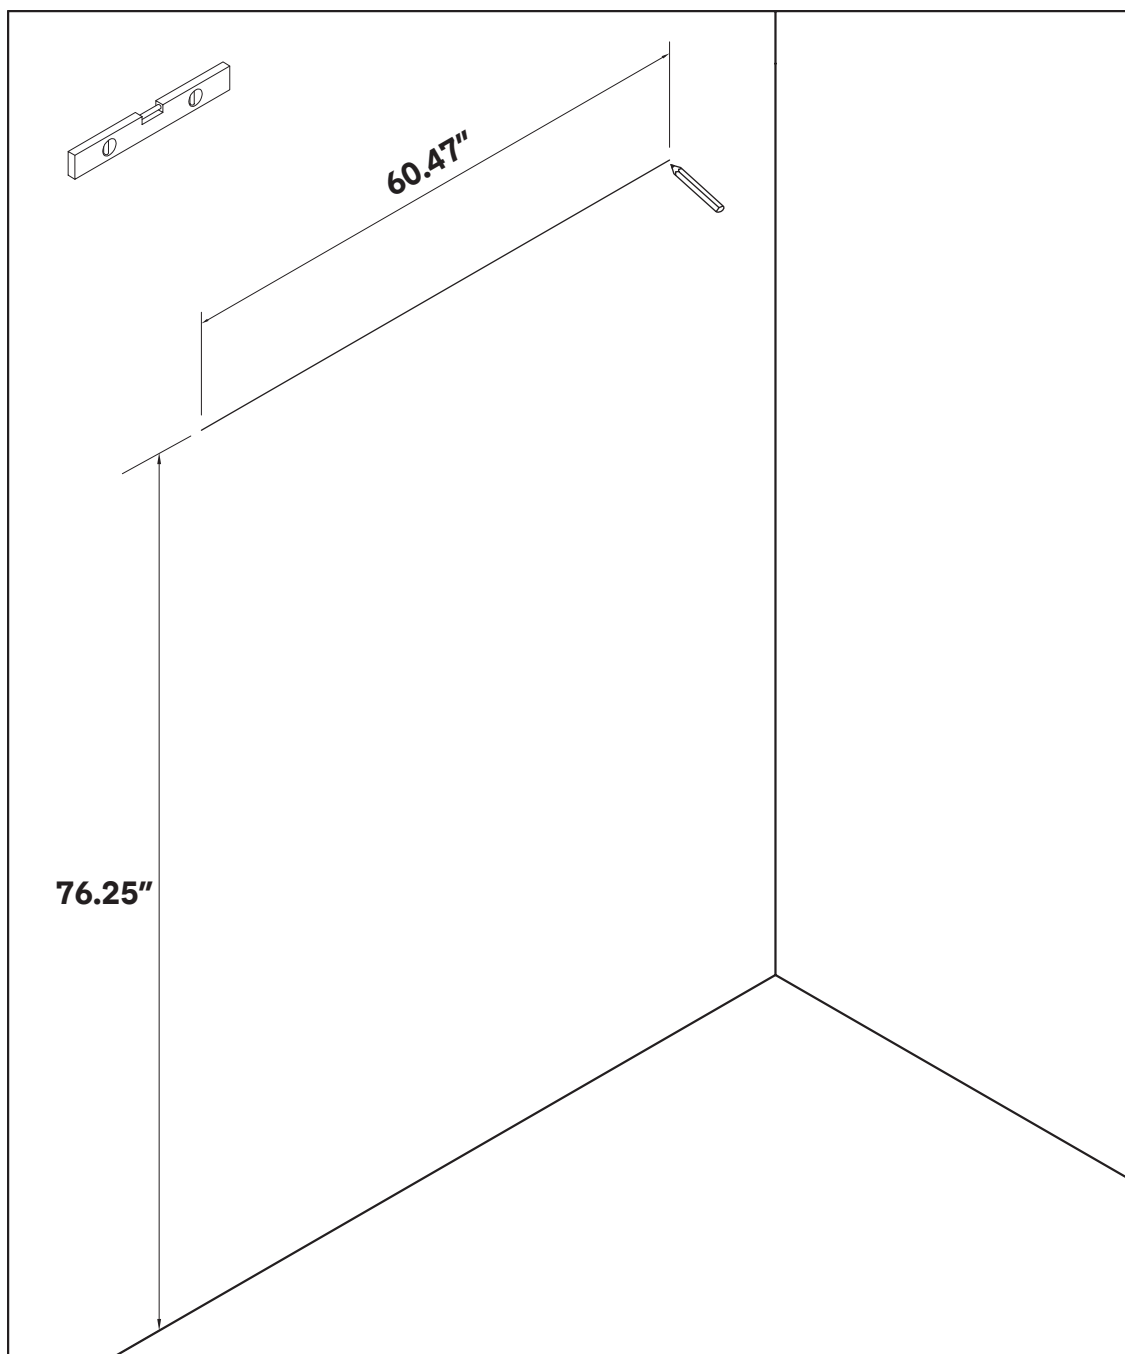- A.** Using a stud finder, find at least one stud that a mounting screw will be secured in before beginning.
- B.** Taking your tape measure, measure from the ground up 76.25".
 - a.** Mark this measurement on the wall with a pencil.
 - b.** This is the height of your mounting holes.
- C.** Using the mark on the wall, take your 4-foot level, and measure out 60.47".
 - a.** Mark this line with a pencil going right to the left.



Step 2:

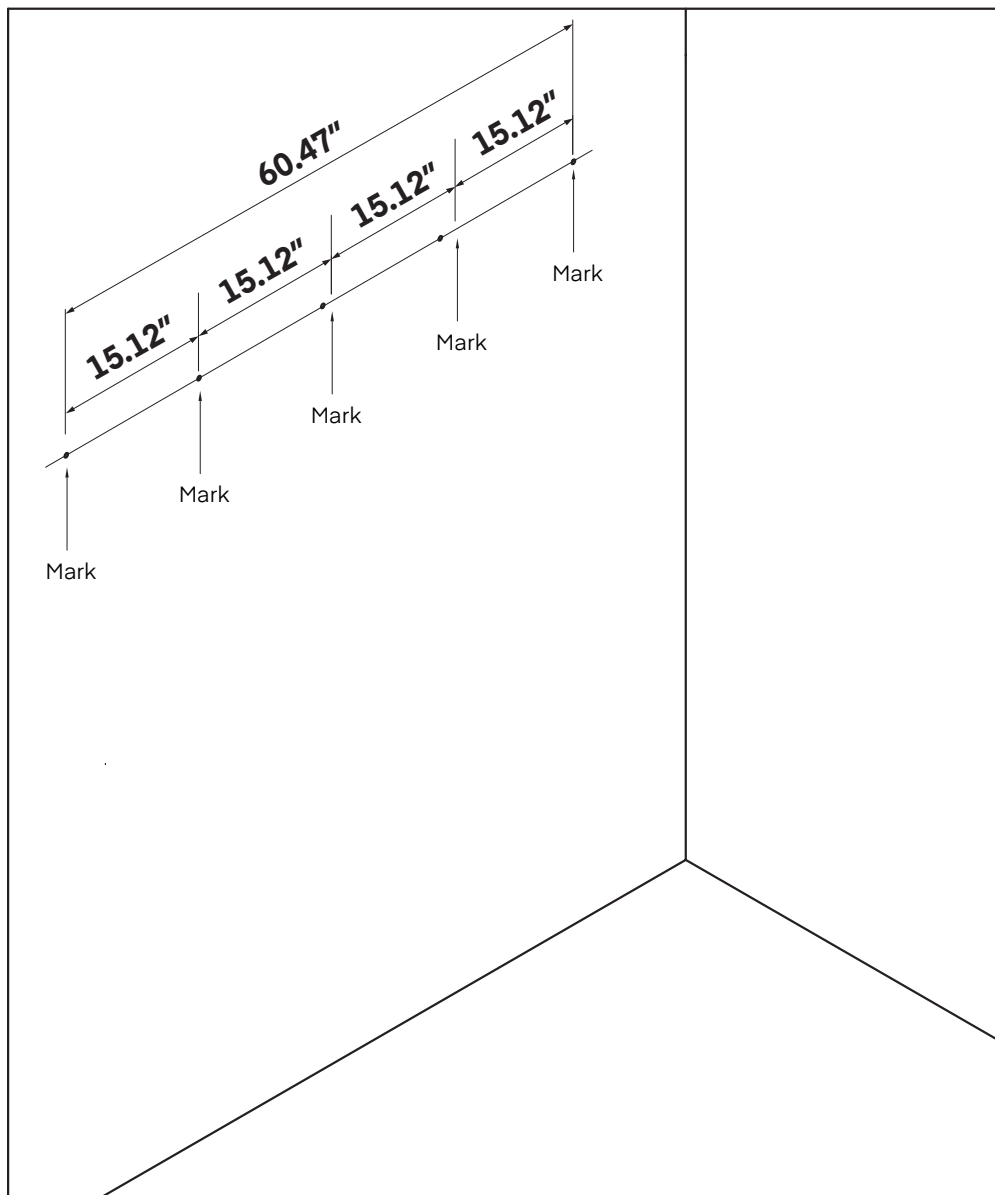
- A.** Using your tape measure, measure from right to left on your line, $15\frac{1}{8}"$.
 - a.** Mark this measurement on the wall.
 - b.** This will be your rightmost drill hole for Center Back Rail (11).
- B.** From this mark, measure the same distance ($15\frac{1}{8}"$) again moving left and place the second mark.
- C.** Repeat this same measurement ($15\frac{1}{8}"$ each time) for the remaining holes.
- D.** Continue until all 5 hole positions are marked.



Step 3:

A. Drill the five holes marked on the wall with a 11 mm drill bit at a depth of 2.75".

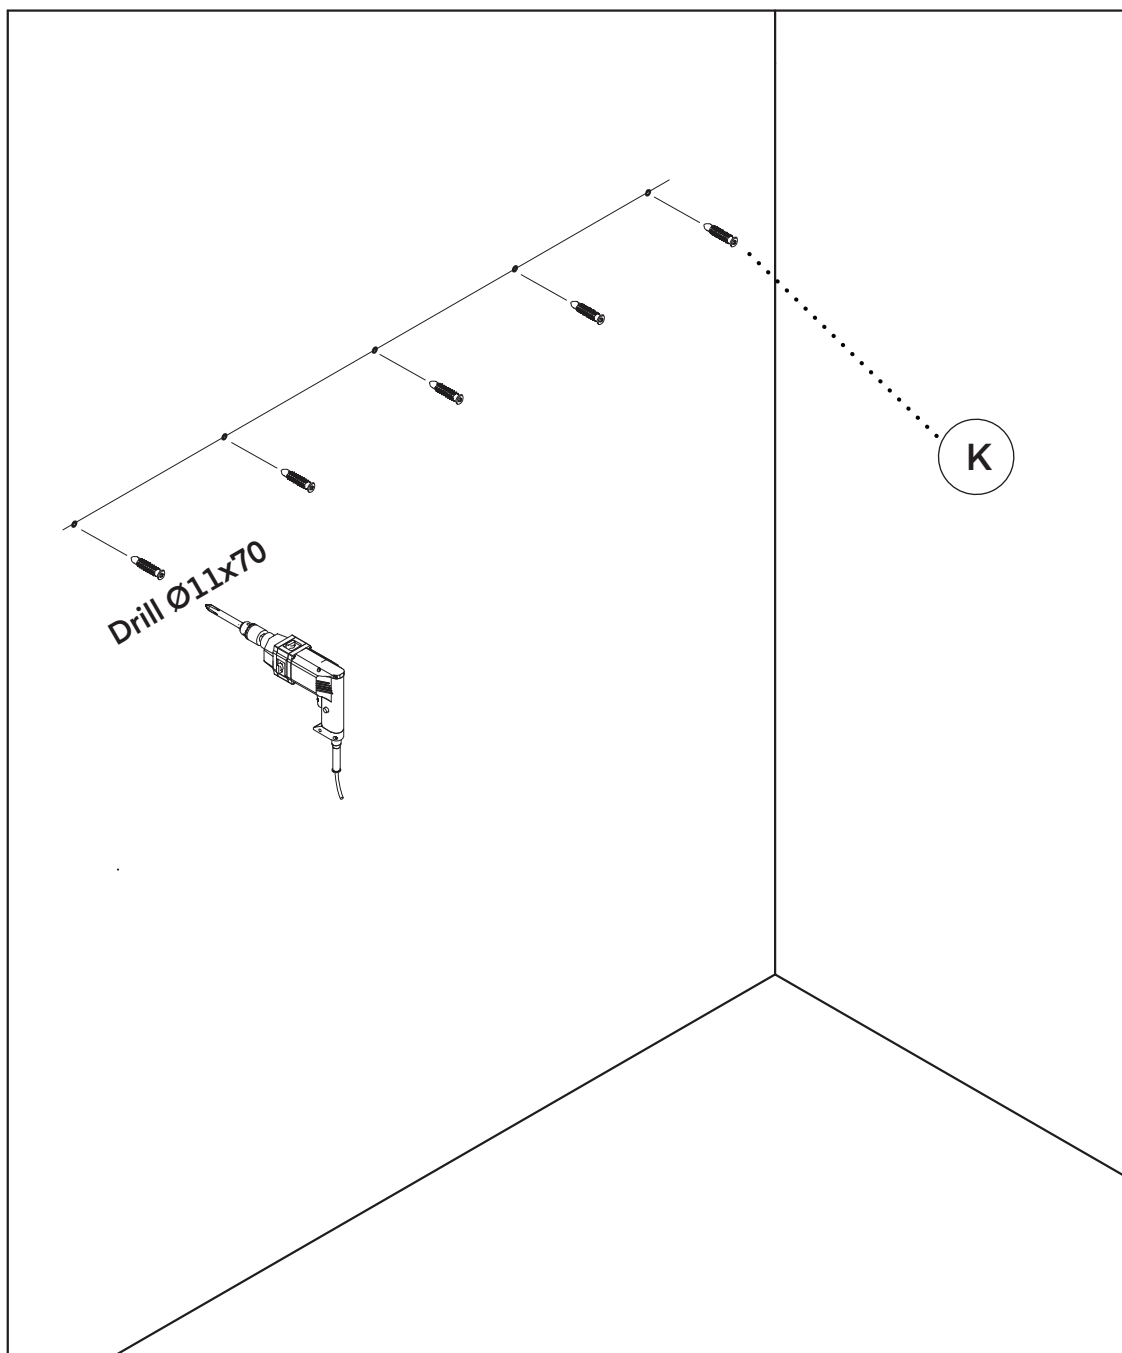B. Insert the five Plastic Anchors (K) into the holes.




Step 4:

A. Locate the Center Back Rail (11), and line it up with the holes you drilled in Step 3.


a. Insert the five included Screws (J) into the predrilled holes on the cleat.

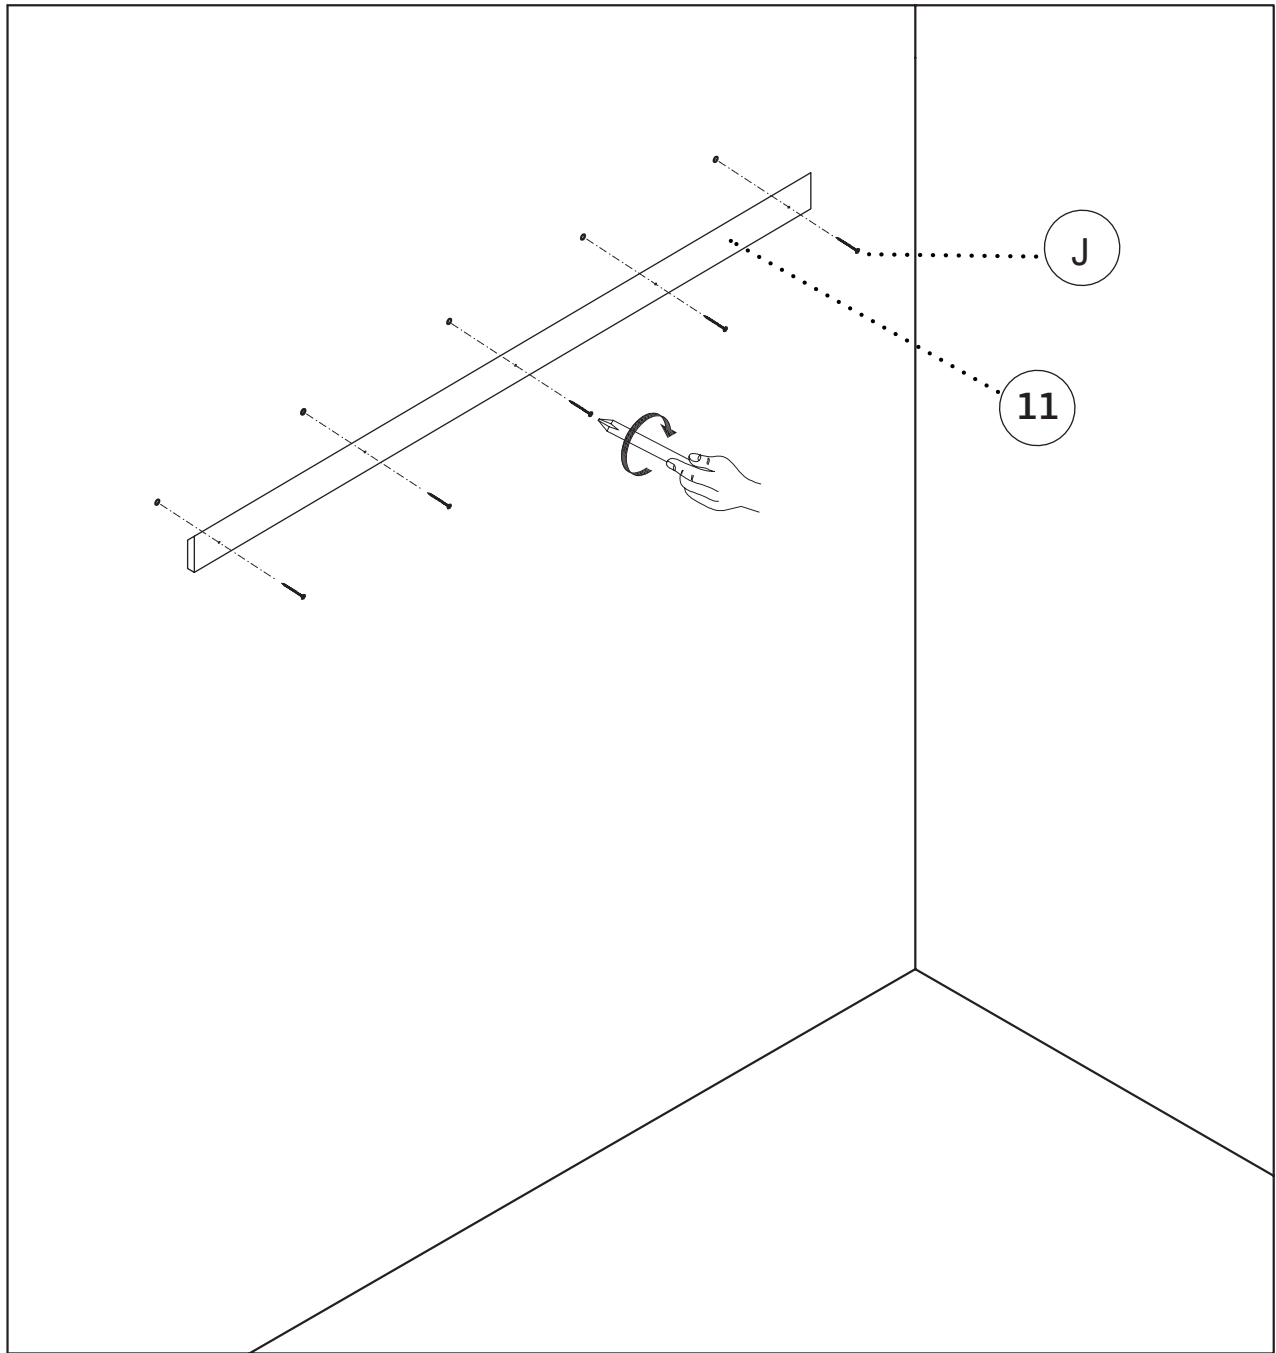b. Secure them in place with either a Phillips head screwdriver or an electric screwdriver.




Step 5:

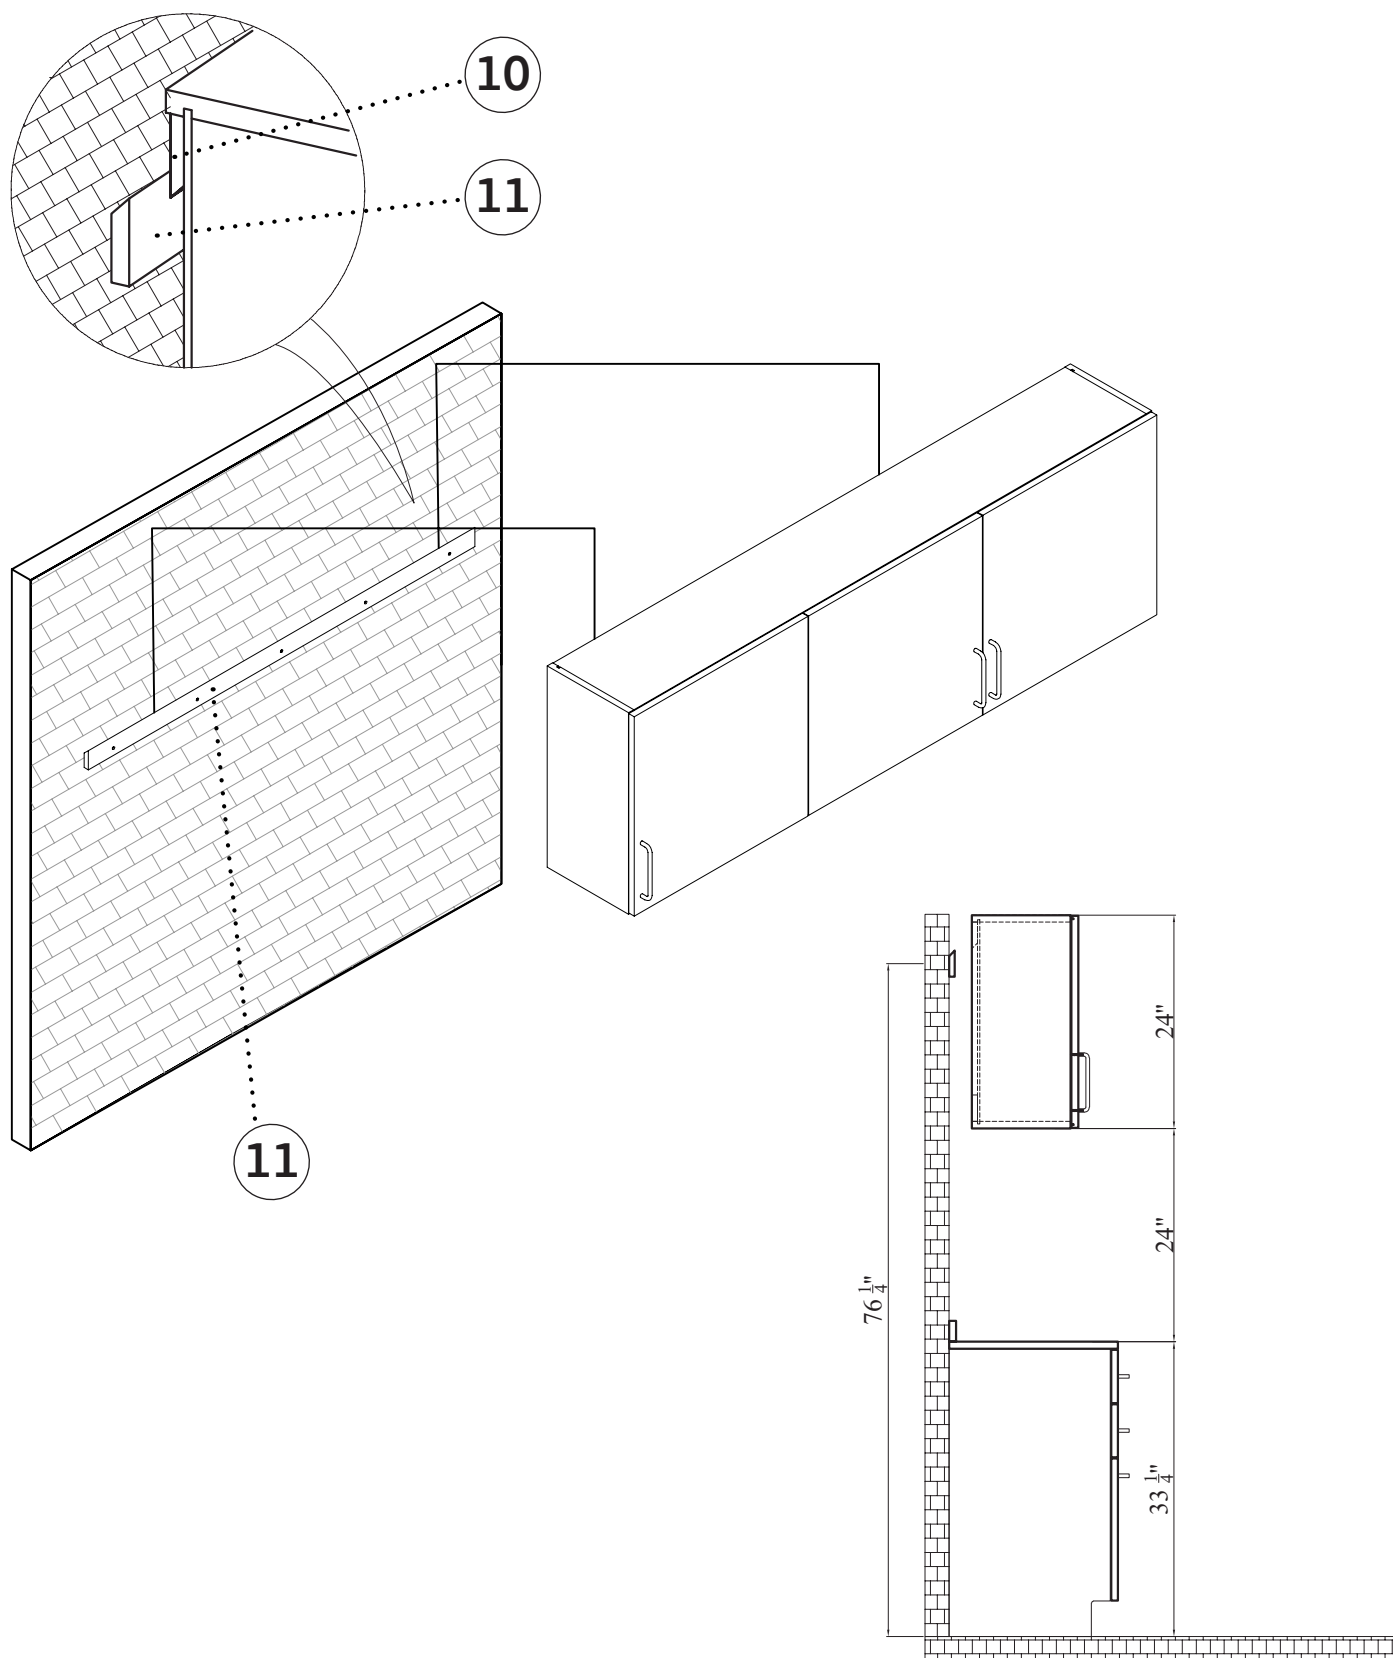- A. With two people, lift your wall cabinet up and over the Center Back Rail (11).
- B. Slowly slide the cabinet down until the Top Back Rail (10) 45° edge fits securely on the Center Back Rail (11) edge.



Warranty

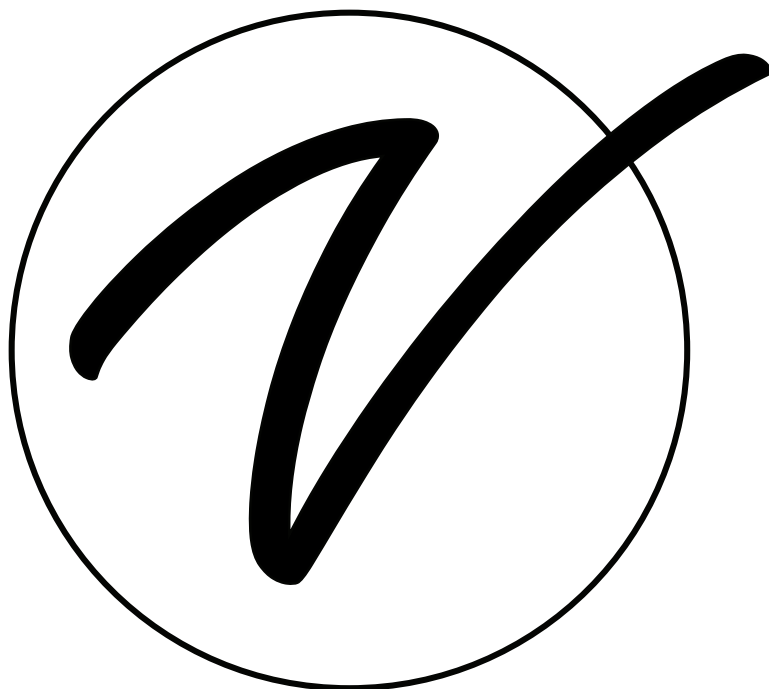1. Viva Comfort (the "Company" or "Tiger Companies") warrants to the purchaser that the product will be free from defects in workmanship and materials for a period of 1 year from the date of purchase. The warranty period is not extended if we repair, replace, exchange, or provide a refund for the product (as determined in our sole discretion). We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.
2. These warranties are not assignable or transferable to any other person, including, without limitation, any subsequent owner or other transferee of the product.
3. This Warranty does not apply to: (a) damage caused by misuse, tampering, abuse, neglect, or accident; (b) damage caused by improper installation, modification, or service; (c) alteration of the serial number; or (d) use that violates the instructions furnished by the Company will void this warranty.
4. The sole responsibility of the Company shall be limited to (a) the repair or replacement (in its sole discretion) of any component of the product which fails to conform to this; (b) a refund the purchase price of such product (in its sole discretion), at no cost to the purchaser for the period of the warranty, or (c) an exchange for a similar product, comparable in function and price.
5. Contact the Company directly at 1-(800)-805-1790 to obtain service under this warranty. If it becomes applicable to send a defective product to the Company, a Return Authorization Number must first be obtained from the Company. In order to obtain service under this warranty, purchaser may be required to provide the Company with the following items (a) proof of purchase, (b) photographs and or videos (of the damage, and (c) a written testimonial describing the defect.
6. Products shipped without prior Return Authorization and Return Authorization Number may not be accepted, and the Company will not be responsible for their disposition and/or cost of return to the owner.
7. The Company will not assume any responsibility for any loss or damage incurred in shipping and or delivery.
8. The product(s) must be returned within 14 calendar days of receiving the return authorization from the Company and must include the original proof of purchase for the warranty to be honored.
9. Any implied warranties that the purchaser may have are limited to the duration of the warranties described above. There are no further warranties that extend or apply beyond the face hereof, and the Company expressly disclaims and excludes any and all warranties of merchantability or fitness for a particular purpose. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
10. THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND THE COMPANY'S ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE LIMITATION MAY NOT APPLY TO YOU.
11. This warranty gives you specific legal rights, and you may also have additional rights which vary from state to state.



ADIME902-WALL-72-GRY

© 2026 Viva Comfort

vivacomfort.com