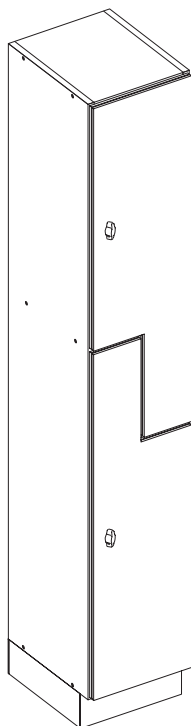




.....

DELUXE WOODEN
SINGLE TIER 2 Z DOOR
WOOD LOCKER

.....



USER GUIDE

SKU: ALP701-Z-SERIES

Thank you for your purchase.

.....

**Alpine maintains a strong
practice of ongoing
development of products
and commercial research.**






.....

Combining commitment to the customer, design innovation and skilled, dedicated workforces, they have produced a range of products that are an essential part of every commercial facility. Every product is designed to the highest standards, enabling you to get your requirements done in a reliable and cost-effective way.





Table of Contents

- 2** Parts List
- 3** Tools Needed (Not Included)
- 4** Hardware List
- 6** Assembly Instructions
- 13** Single Metal Base Assembly
- 19** Connecting the Lockers Together
- 21** Double/Triple Metal Base Assembly
- 22** Double Metal Base Assembly
- 24** Triple Metal Base Assembly
- 27** Anchoring the Lockers to the Wall
- 30** Notes
- 31** Warranty

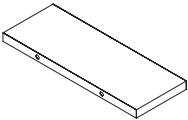

Parts List

A  Right Side Panel (17x361x1729 mm)	B  Left Side Panel (17x361x1729 mm)	C  Back Panel (9x278x1701 mm)
D  Back Cover (x5) (17x76x268 mm)	E  Roof Panel (17x268x360 mm)	F  Crossbar (x2) (17x125x333 mm)
G  Bottom Plate (17x268x360 mm)	H  Middle Wall (17x319x333 mm)	I  Dead Shelf (x2) (17x130x268 mm)
J  Upper Door (17x305x1012 mm)	K  Lower Door (17x305x1012 mm)	






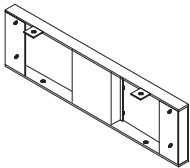
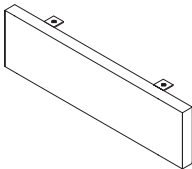
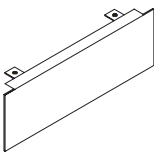
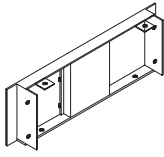
Single Metal Base

L  Right Side Panel (20x356x102 mm)	M  Left Side Panel (20x356x102 mm)	N  Front Panel (20x305x102 mm)
O  Back Panel (20x305x102 mm)		

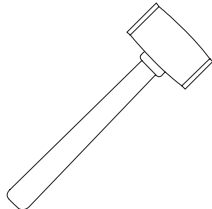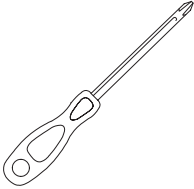Tools Needed (Not Included)


 Rubber Mallet	 Phillips Head Screwdriver	 Wrench
---	---	--

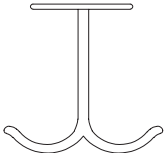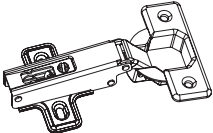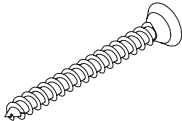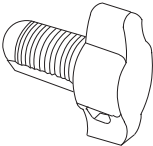Hardware List

1  Cam Lock Bolt (x14)	2  Cam Lock (x14)	3  Clothes Hanger (x1)
4  Wooden Dowel (x18) (8x30)	5  Hinge (x6)	6  Flat Head Screw (x42) (15 mm)
7  Flat Head Screw (x14) (40 mm)	8  Lock (x2)	9  Pass L Block Lock (x2)
10  Locking Lever (x2)	11  Locking Mark Retaining Screw (x2)	12  Key Mark (x2)


Hardware List (Continued)

13



Bolt (x8)
15MM

14




Flat Head Screw (x8)
(15 mm)
(For Connecting Base with
Locker)

Assembly Instructions

Step 1:

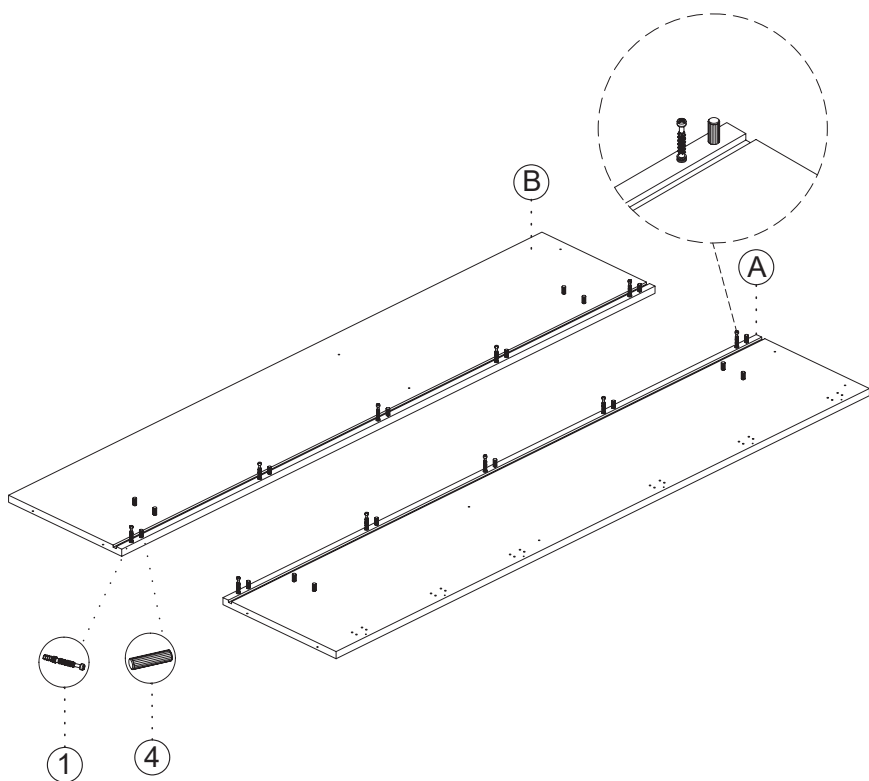- A.** Locate the Left Side Panel (B) and the Right Side Panel (A), and insert four Wooden Dowels (4) and six Cam Lock Bolts (1) into each of their pre-drilled holes, as pictured.
- B.** Gently tap in the Wooden Dowels (4) with a rubber mallet until secure. For the Cam Lock Bolts (1), screw them in until secure with a Phillips Head Screwdriver.




Step 2:

A. Take the Right Side Panel (A) and attach the Back Covers (D), Dead Shelves (I), Roof Panel (E), Bottom Plate (G), Back Panel (C) to where you installed the Cam Lock Bolts (1) and Wooden Dowels (4).


a. Make sure the Back Covers (D) have the cam lock hole facing inward when installing.

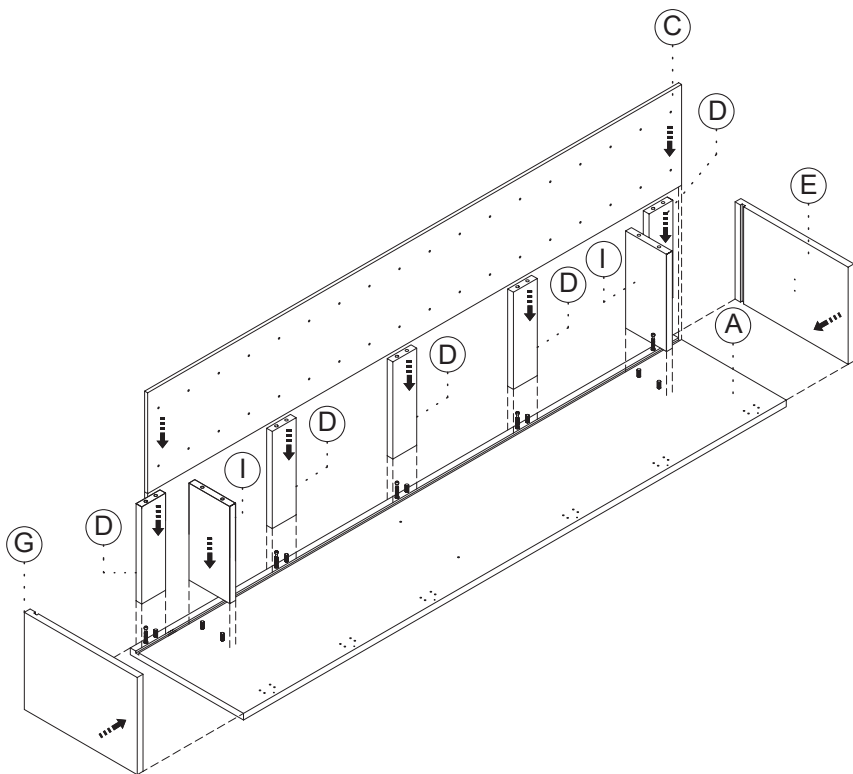B. Gently tap them with a rubber mallet until they are flush.




Step 3:

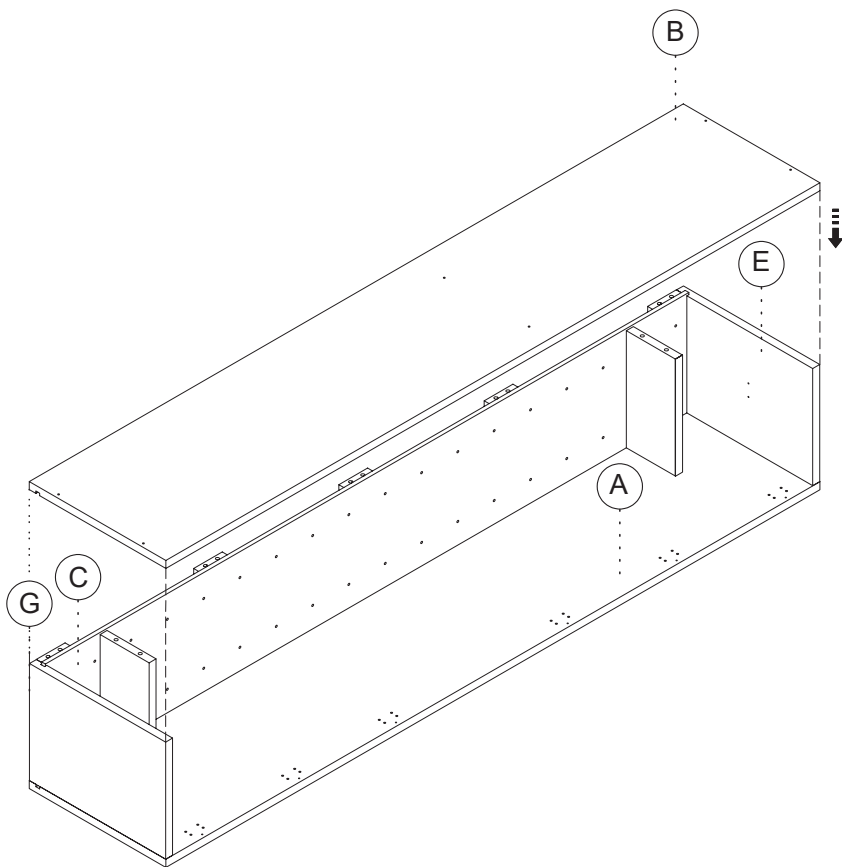- A.** Locate the Left Side Panel (B) and insert it into the Back Panel (C), Back Covers (D), Dead Shelves (I), Roof Panel (E), and Bottom Plate (G) where you installed the pins and bolts.
- B.** Gently tap the plate with a rubber mallet until it is level.




Step 4:

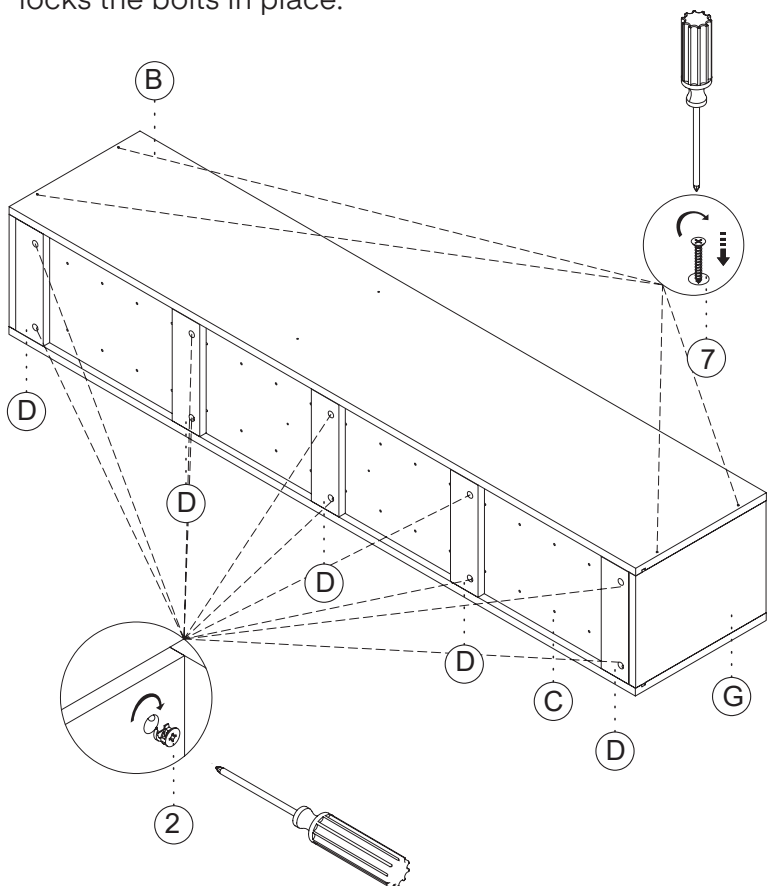- A.** Insert four Flat Head Screws (7) through the upper and lower Left Side Panel (B) holes and secure in place with a Phillips head screwdriver, as pictured.
- B.** Insert Cam Locks (2) into each hole adjacent to where you installed a Cam Lock Bolt (1), as pictured.
- a.** Turn the Cam Lock (2) a quarter turn clockwise so it locks the bolts in place.




Step 5:

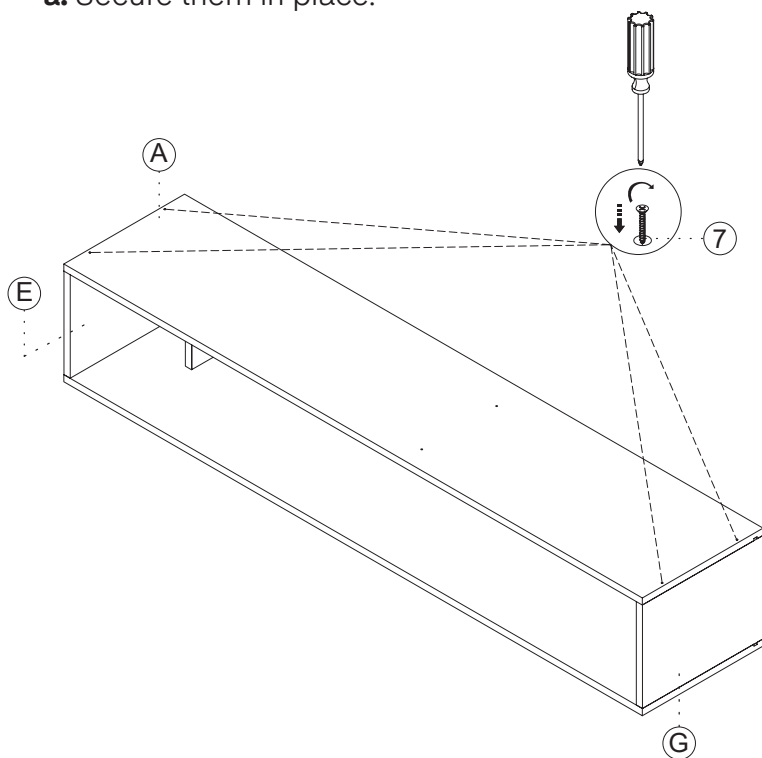- A.** Using two people, gently turn the structure so it rests on the Left Side Panel (B), and the Right Side Panel (A) is sticking up.
- B.** Insert four Flat head Screws (7) through the two upper and lower holes on the side panel, as pictured.
 - a.** Secure them in place.




Step 6:

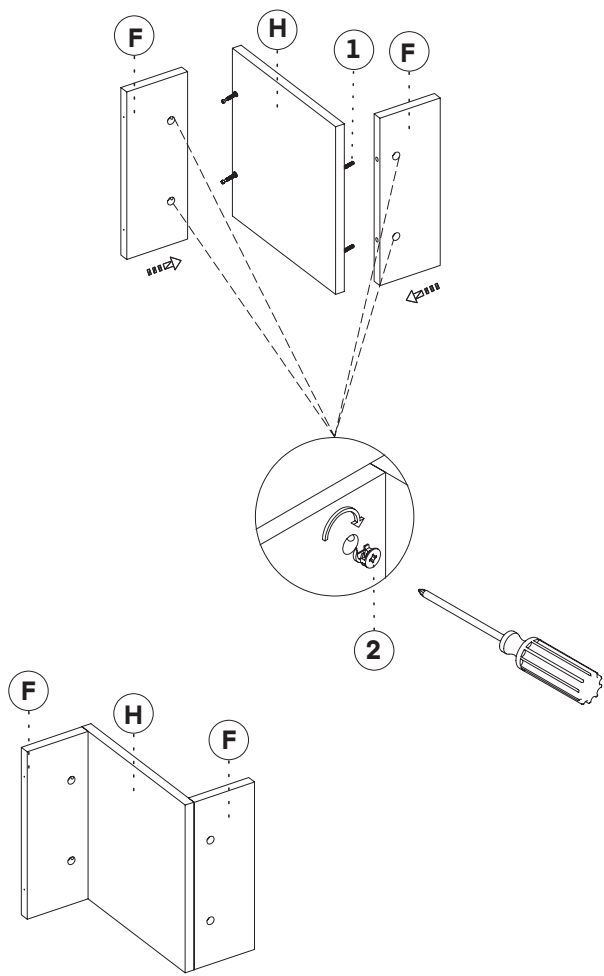A. Connect the Middle Wall (H) to the Crossbars (F) with Cam Lock Bolts (1) and Cam Locks (2).



Step 7:

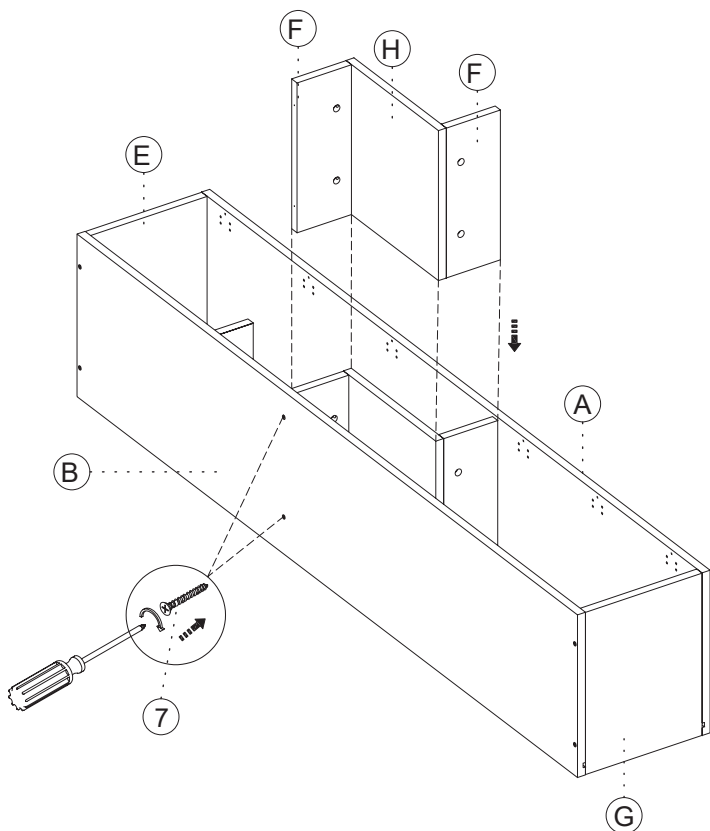
- A.** Connect the assembled Middle Wall (H) and Crossbars (F) into the cabinet.
- B.** Gently tap the panel with a rubber mallet until it is flush.
- C.** Insert screws into the predrilled holes on the Left Side Panel (B) and Right Side Panel (A), as pictured.
 - a.** Secure all screws into the Crossbars (F).



Single Metal Base Assembly


Step 8:

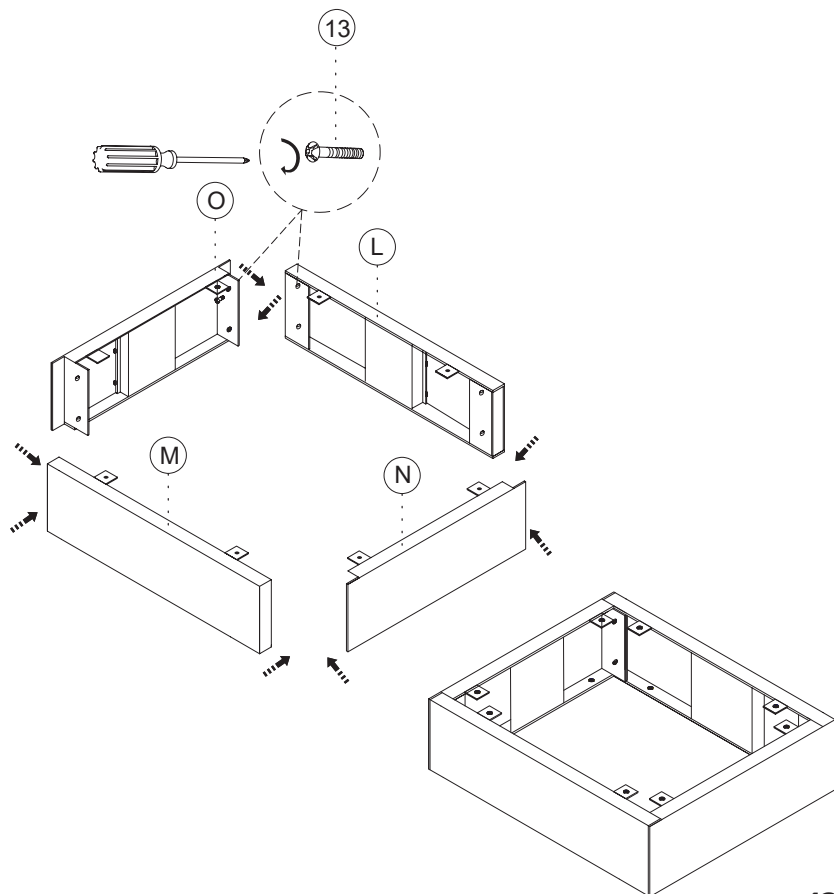- A.** Locate and connect the Back Panel (O) to Right Side Panel (L), Back Panel (O) to Left Side Panel (M), the Front Panel (N) to Right Side Panel (L), and Front Panel (N) to Left Side Panel (M) using included 8 Bolts (13) using a Phillips Head Screwdriver.



Step 9:

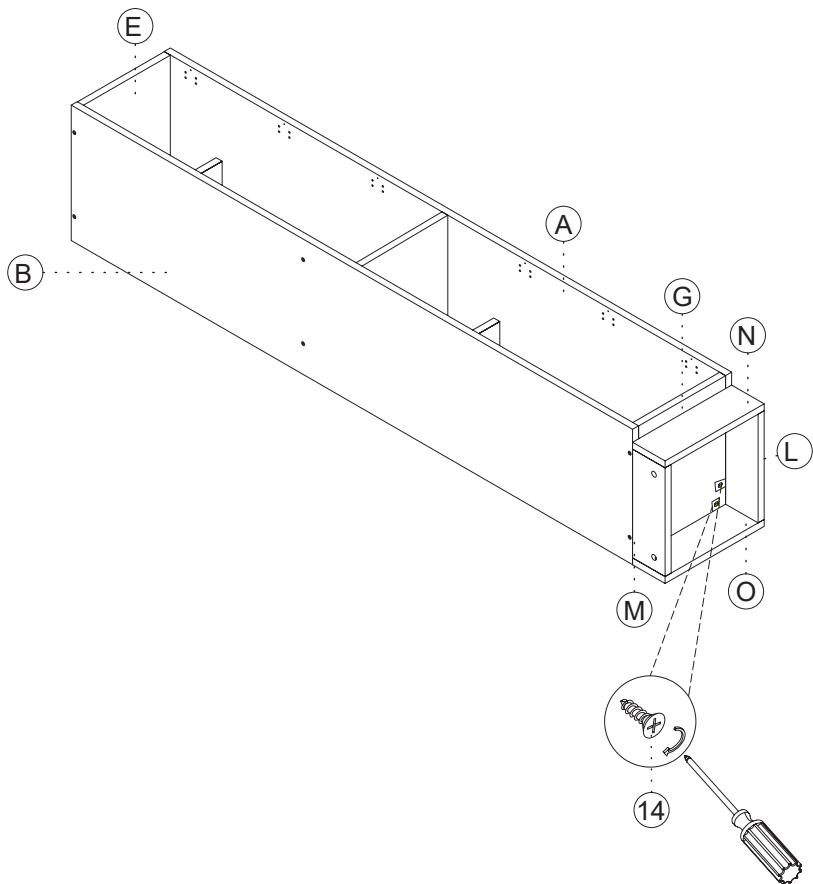
- A.** Put the assembled metal base onto bottom of the cabinet.
- B.** Using eight Flat Head Screws (14), secure the Front Panel (N), Right Side Panel (L), Back Panel (O), and Left Side Panel (M) to the Bottom Plate (G).



Step 10:


STOP! If you plan to connect your lockers together, complete Step 14 first, before attaching the door hinges.

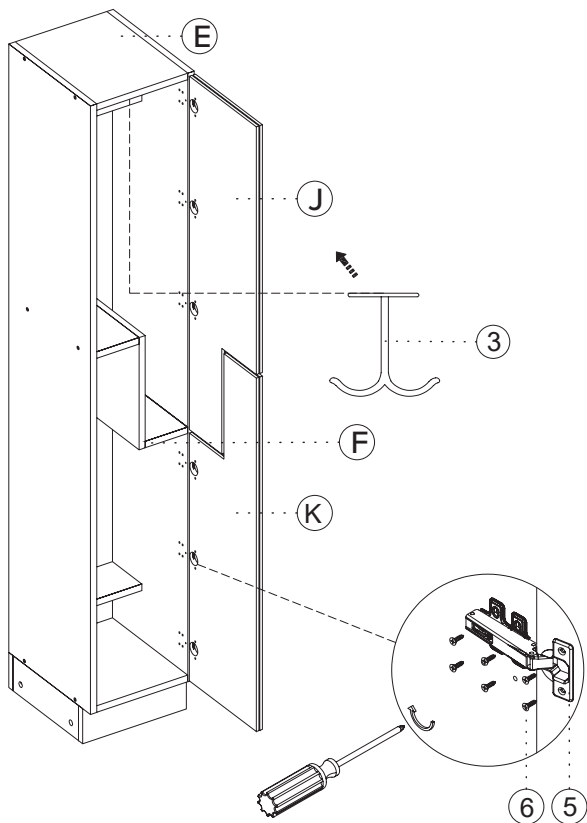- A.** Using thirty-six Flat Head Screws (6) and Hinges (5), attach the Right Side Panel (A) to the Lower Door (K) and Upper Door (J).
- B.** Using four Flat Head Screws (6), attach the Clothes Hanger (3) to the Roof Panel (E) and Middle Shelf (F).




Step 11:

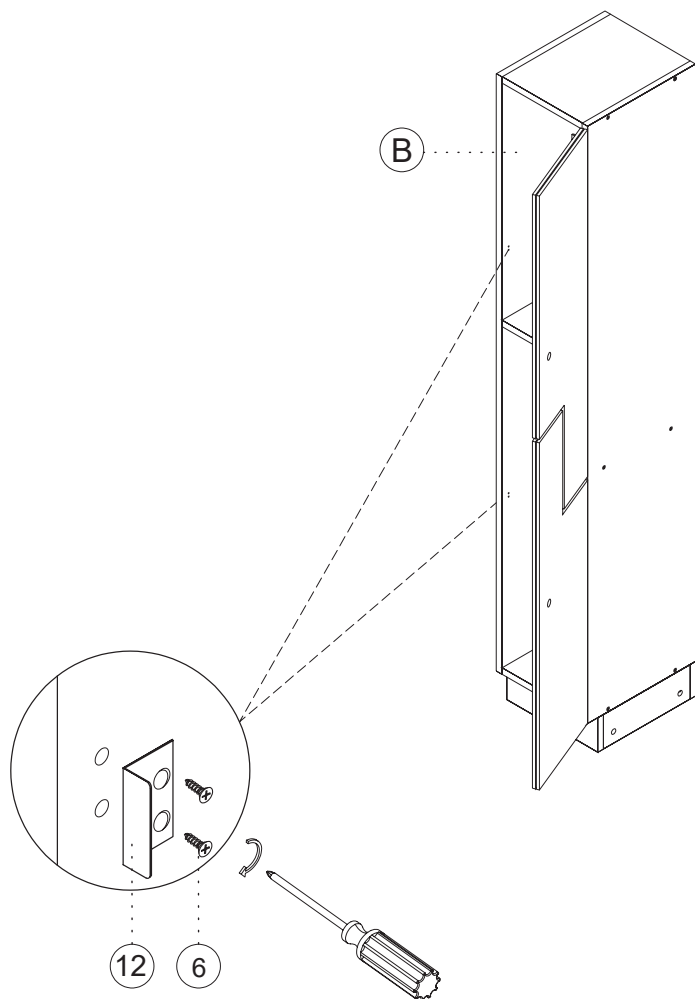- A.** Secure the Key Mark (12) to the Left Side Panel (B) using two Flat Head Screws (6) and a Phillips head screwdriver.




Step 12:

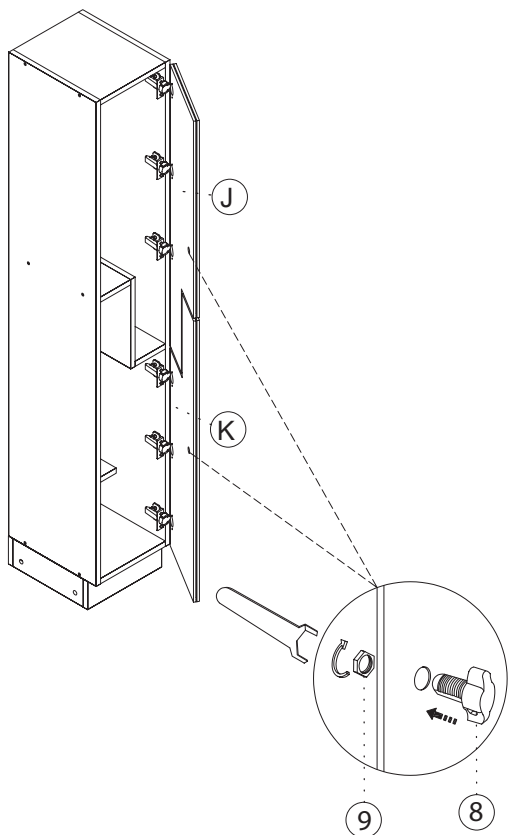- A.** Insert the Locks (8) into the holes on both the Lower Door (K) and Upper Door (J).
- B.** Secure each lock by placing the Pass L Block Locks (9) on the inside of the doors, opposite the lock face.
- C.** Tighten them with a wrench, as shown in the diagram.




Step 13:

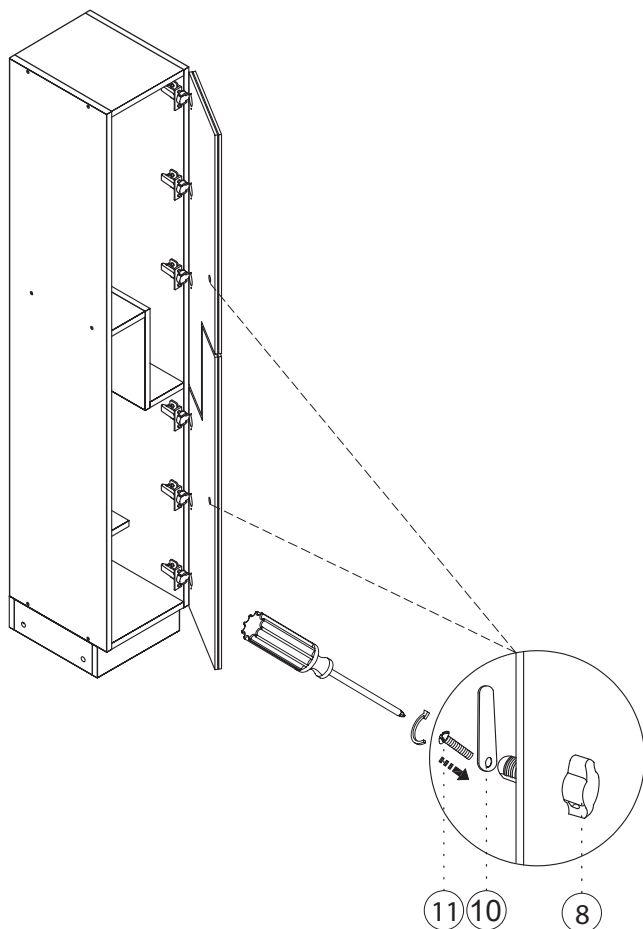- A.** Place the Locking Levers (10) over the ends of the Locks (8), as shown.
- B.** Secure them by inserting and tightening the Locking Mark Retaining Screws (11) on the opposite side.




Connecting the Lockers Together

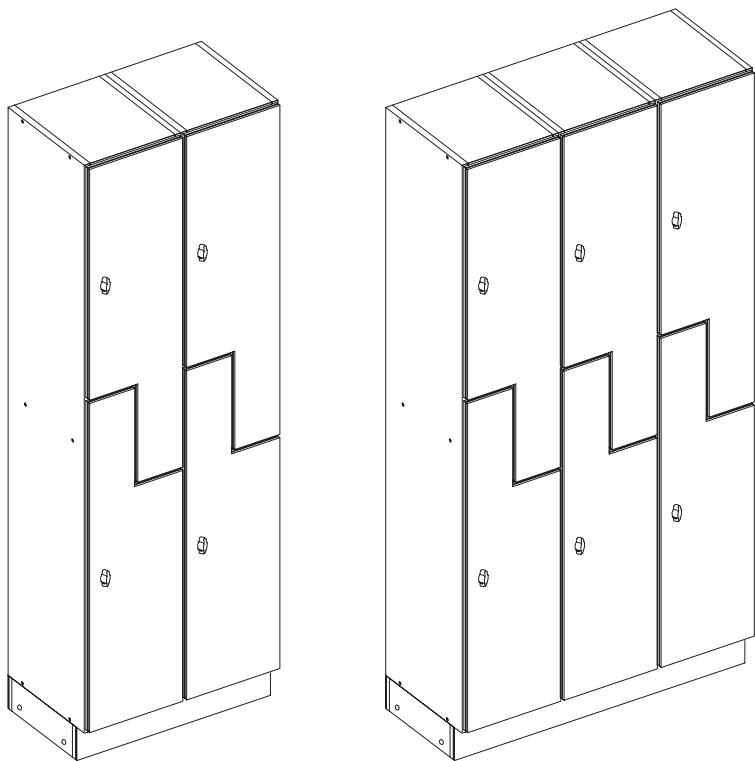

Step 14:


To connect your lockers together—regardless of the quantity—follow the same steps below. You need to do these steps before installing the hinges and doors.

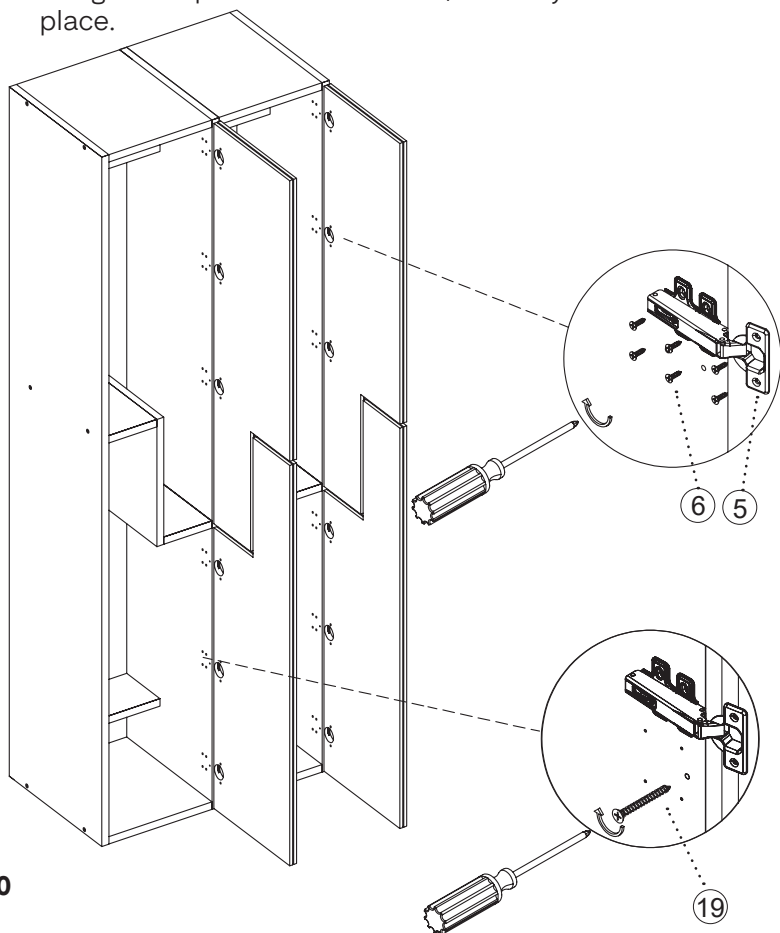- A.** Locate six 30 mm Screws (19) for two lockers or twelve 30 mm Screws (19) for three lockers. Insert them into the pre-drilled holes located between the hinge holes on the side panels of the lockers.
- B.** Using a Phillips head screwdriver, securely fasten each screw in place.




Double / Triple Base Assembly

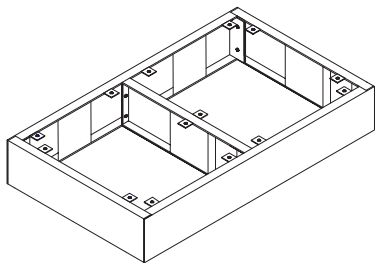Base Options



ALP701-B-D

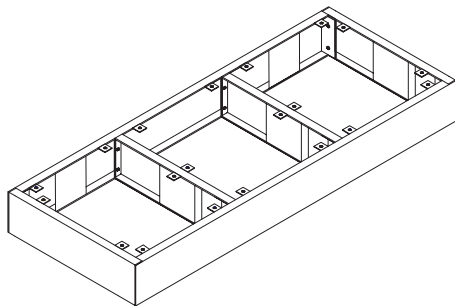Double Metal Base








ALP701-B-TR




Triple Metal Base

Double Metal Base Assembly

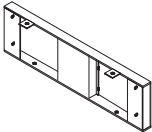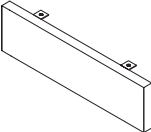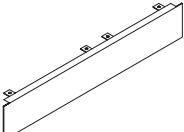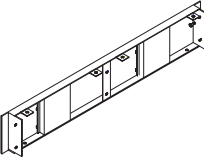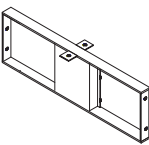Parts List


L  Right Side Panel 20x356x102 mm	M  Left Side Panel 20x356x102 mm	N  Front Panel 20x610x102 mm
O  Back Panel 20x610x102 mm	P  Middle Panel 20x320x102 mm	

Hardware List

13  Bolt (x12) 15MM	19  30 mm Screw (x6) (30 mm)	20  Flat Head Screw (x14) (15 mm) (For Connecting Base with Locker)
---	--	---






Step 1:

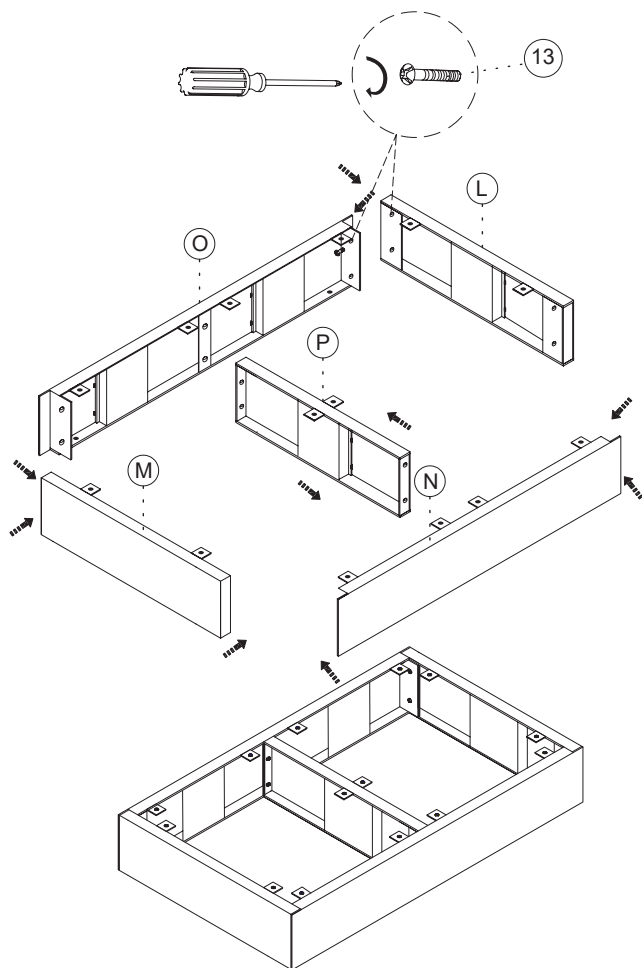- A.** Locate and connect the Back Panel (O) to Right Side Panel (L) and Left Side Panel (M), the Front Panel (N) to Right Side Panel (L) and Left Side Panel (M), and Middle Panel (P) to the Front Panel (N) and Back Panel (O) using included 12 Bolts (13).
- B.** Secure in place using a Phillips head screwdriver.






Triple Metal Base Assembly

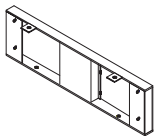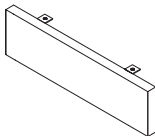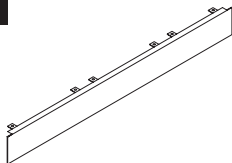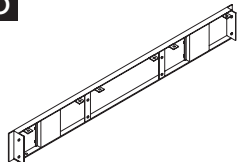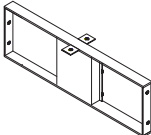Parts List


L  Right Side Panel 20x356x102 mm	M  Left Side Panel 20x356x102 mm	N  Front Panel 20x914x102 mm
O  Back Panel 20x914x102 mm	P  Middle Panel (x2) 20x320x102 mm	

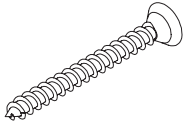Hardware List

13  Bolt (x12) 15MM	19  30 mm Screw (x12) (30 mm)	20  Flat Head Screw (x20) (15 mm) (For Connecting Base with Locker)
---	---	---

Step 1:

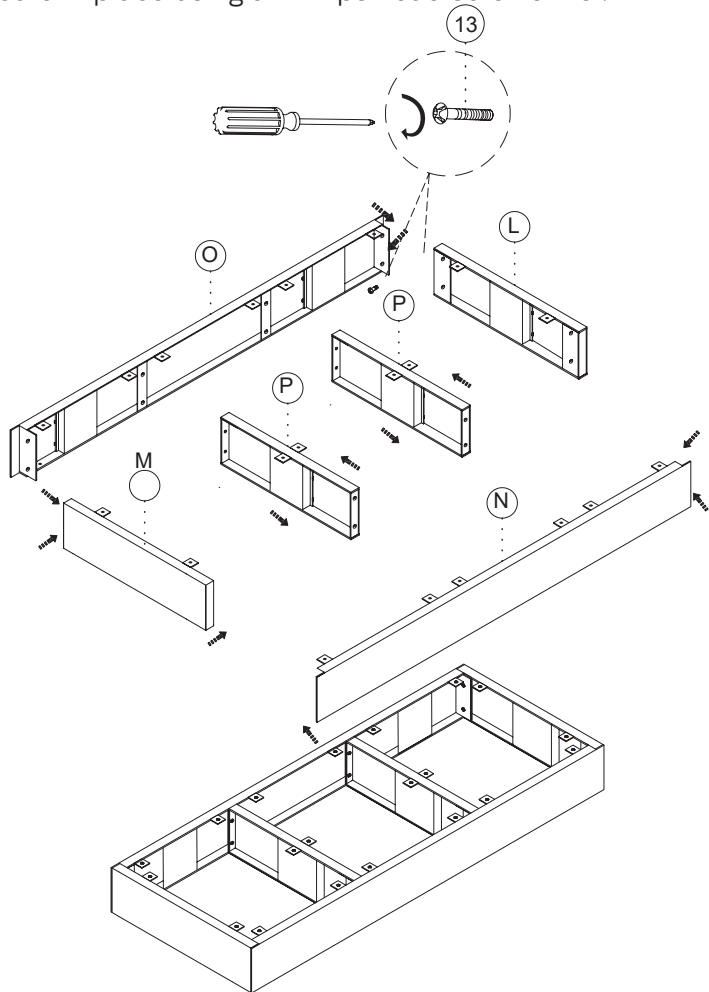
- A.** Locate and connect the Back Panel (O) to Right Side Panel (L) and Left Side Panel (M), the Front Panel (N) to Right Side Panel (L) and Left Side Panel (M), and two Middle Panels (P) to the Front Panel (N) and Back Panel (O) using the 12 included Bolts (13).
- B.** Secure in place using a Phillips head screwdriver.




Step 2:

- A.** Put the assembled metal base onto bottom of the cabinet.
- B.** Using Flat Head Screws (20), secure the Front Panel (N), Right Side Panel (L), Back Panel (O), Middle Panels (P) and Left Side Panel (M) to the Bottom Plate (G).

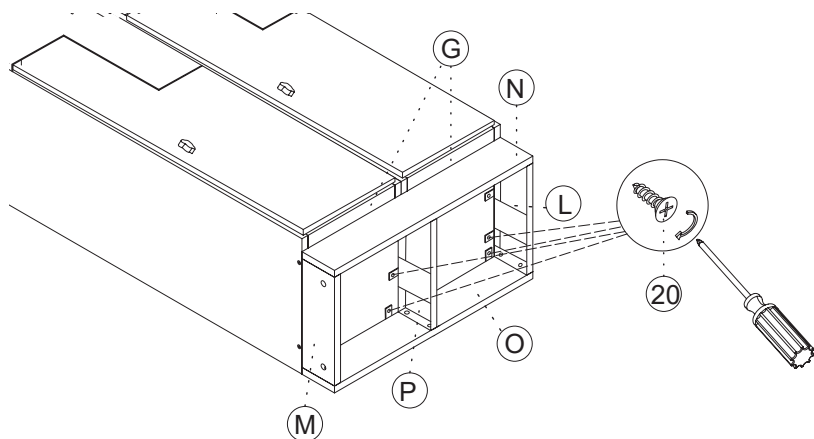Double Metal Base



Triple Metal Base

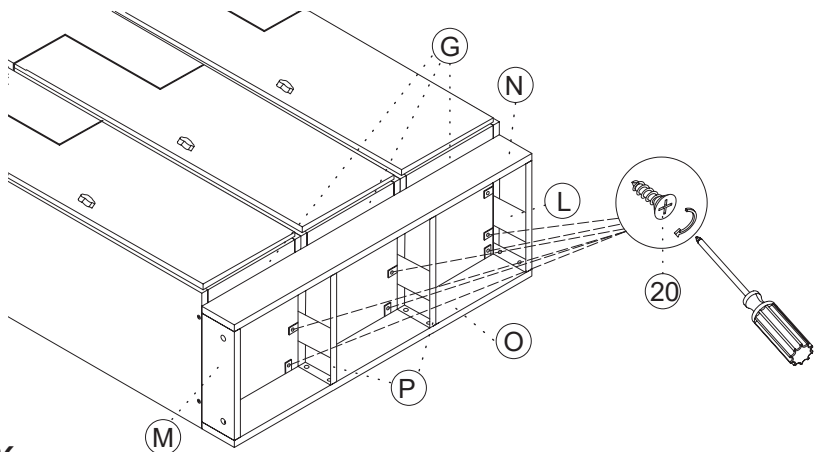





Anchoring the Lockers to the Wall

For safety reasons, we recommend you follow these instructions to install the anti-tipping hardware. When installed properly, this hardware may prevent the lockers from tipping unexpectedly.




Serious injury or death can occur if furniture tips over. Place heavy items on lower shelves and as far back as possible.

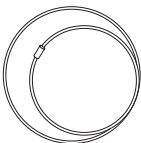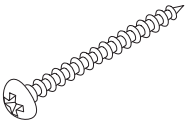Hardware List

14  Plastic Anchor (x4) (M6*30)	15  Metal Securing Cable (1.5*250)	16  Metal Bracket (x4)
17  Screw 1 (x4) (M4*16)	18  Screw 2 (x4) (M4*30)	


Step 1:

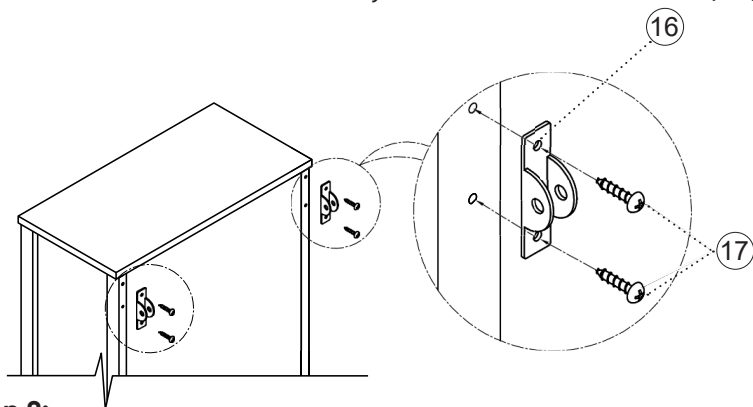- A.** Locate two Metal Brackets (16) and four Screw 1s (17).
- B.** Align the holes in each Metal Bracket (16) with the designated positions along the back edge of the lock, as shown in the diagram. Using an electric screwdriver, fasten the brackets securely with the four Screw 1s (17).




Step 2:

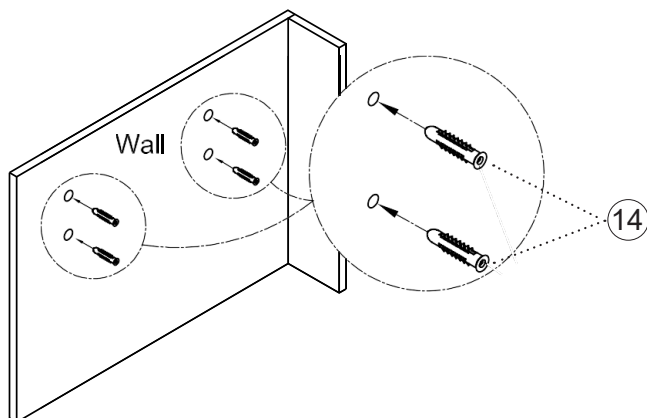- A.** Drill four holes in the wall using an 8mm drill bit.
- B.** Insert the four Pastic Anchors (14) into the holes.




Step 3:

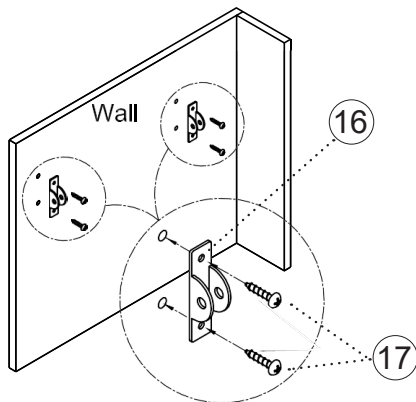- A.** Align the holes in the Metal Bracket (16) with the Plastic Anchors (14).
- B.** Insert four Screw 1s (17) through the Metal Bracket (16) and tighten them securely using a Phillips head screwdriver.



Step 4:

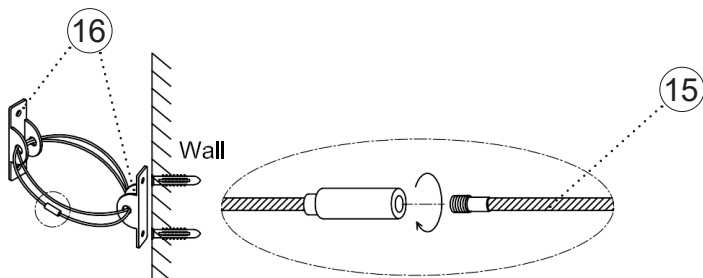- A.** Take the included Metal Securing Cable (15) and thread it through the Metal Brackets (16) on both the wall and the lockers, as installed in the previous steps.
- B.** After looping the cable through the brackets at least twice, as pictured, twist the ends of the Securing Cable (15) clockwise until they are tightly secured in place.



[illegible]

Warranty

1. Alpine Industries (the "Company" or "Tiger Companies") warrants to the purchaser that the product will be free from defects in workmanship and materials for a period of 1 year from the date of purchase. The warranty period is not extended if we repair, replace, exchange, or provide a refund for the product (as determined in our sole discretion). We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.
2. These warranties are not assignable or transferable to any other person, including, without limitation, any subsequent owner or other transferee of the product.
3. This Warranty does not apply to: (a) damage caused by misuse, tampering, abuse, neglect, or accident; (b) damage caused by improper installation, modification, or service; (c) alteration of the serial number; or (d) use that violates the instructions furnished by the Company will void this warranty.
4. The sole responsibility of the Company shall be limited to (a) the repair or replacement (in its sole discretion) of any component of the product which fails to conform to this; (b) a refund the purchase price of such product (in its sole discretion), at no cost to the purchaser for the period of the warranty, or (c) an exchange for a similar product, comparable in function and price.
5. Contact the Company directly at 1-(800)-805-1790 to obtain service under this warranty. If it becomes applicable to send a defective product to the Company, a Return Authorization Number must first be obtained from the Company. In order to obtain service under this warranty, purchaser may be required to provide the Company with the following items (a) proof of purchase, (b) photographs and or videos (of the damage, and (c) a written testimonial describing the defect.
6. Products shipped without prior Return Authorization and Return Authorization Number may not be accepted, and the Company will not be responsible for their disposition and/or cost of return to the owner.
7. The Company will not assume any responsibility for any loss or damage incurred in shipping and or delivery.
8. The product(s) must be returned within 14 calendar days of receiving the return authorization from the Company and must include the original proof of purchase for the warranty to be honored.
9. Any implied warranties that the purchaser may have are limited to the duration of the warranties described above. There are no further warranties that extend or apply beyond the face hereof, and the Company expressly disclaims and excludes any and all warranties of merchantability or fitness for a particular purpose. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
10. THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND THE COMPANY'S ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE LIMITATION MAY NOT APPLY TO YOU.
11. This warranty gives you specific legal rights, and you may also have additional rights which vary from state to state.



ALP701-Z-SERIES

© 2025 Alpine Industries

alpineindustries.com