



4Post™ & Accessories



datum

Get the most with 4Post...

Datum's 4Post™ Shelving offers exceptional strength and durability for a variety of storage applications. This shelving line incorporates both "L" and "T" shaped uprights, allowing for flexibility in configuration. Interlocking keyhole uprights combined with double rivet shelf supports are designed to offer maximum strength with exceptional versatility. Available in single or double entry units to maximize your storage capacity with minimal floor intrusion. All units are designed for expansion and are also available as "mobile ready" for easy conversion to a TrakSlider™ or MobileTrak™ system.

Prepunched Tops

Prepunched tops and single rivet bottom shelf supports allow for easy attachment to a TrakSlider™ System without any drilling.

Powder Coat

All 4Post™ parts are powder coated with a textured finish in any of Datum's 19 standard paint colors resulting in a durable, long lasting finish. Custom colors available.

Uprights

Uprights are made of heavy duty 18 gauge steel and are available in open or closed styles. Key slots are positioned on 1-1/2" centers allowing for shelves to be adjusted up and down as needed.

Customization

Datum offers more sizes than any other manufacturer. Choose from 24", 30", 36", 42", and 48" wide shelves to create a custom solution for maximum storage capacity.

Adjustable Shelves

Shelves are adjustable to allow for storage of various media on one shelving system. Available in slotted, unslotted, or punched, as well as standard, medium, and heavy duty.

Shelf Supports

All shelves are equipped with two heavy duty double rivet shelf supports. Optional shelf reinforcements can be added if needed to increase load capacities.

Dividers

Dividers are adjustable on 2" centers and help keep stored materials upright, neat, and organized.



Make mine to go...

Take advantage of the space you have by combining 4Post™ Shelving with one of our movable systems.



TrakSlider™

Combining 4Post™ with our TrakSlider™ Systems more than doubles your current storage capacity by converting stationary files into movable systems.


MobileTrak®

For larger, high capacity applications, combine 4Post™ and MobileTrak® to reduce floor space requirements by up to 50%. MobileTrak® eliminates all but one movable aisle from a traditional stationary layout by attaching shelving to heavy duty rolling shelves. Available as the traditional MobileTrak5®, or the new MobileTrak3® for applications where height restrictions apply.



Double the functionality.

4Post™ has the unique ability to be a dual entry unit, meaning that users can store and access materials on both sides of a single unit, as opposed to stacking two units back to back. This function is cost efficient and saves you valuable floor space.

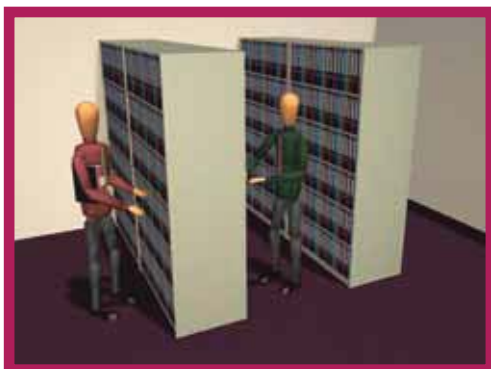

Center stops prevent stored materials from being accidentally pushed through to the other side of the unit.

Like to accessorize? So do we.

Nothing completes your 4Post™ Shelving System better than our selection of accessories, designed to customize your system to your exact requirements. From drawers to doors to garment rods, we've got your accessories covered.



Hinged Doors

- Heavy duty hinged steel doors are durable and strong
- Fits existing 4Post™ Shelving easily, does not require disassembly of shelving
- 3-point locking door ensures the security of store contents



TambourDoor™

- Lockable to ensure the safety and security of stored information, including medical records to assist with HIPAA requirements
- Can be added to existing 4Post™ units, as well as other brands of shelving without moving or disassembly.
- Convenient single door/single lock design requires little effort to secure



GunStor™

- Steel construction is durable enough for heavy equipment
- 3-point locking door keeps guns and ammunition secure
- Adjustable rack to fit most rifles, shotguns, and pistols
- GunStor™ kits include gun rests, rifle supports, dividers, and shelf



PlanStor™

- Ideal for rolled or flat large format blueprint or plan storage
- Removable dividers can be adjusted to fit any size paper rolls or to accommodate plans stored flat
- Optional laminate top for shorter units provides convenient work surface



Drawer Systems

- Drawers can accommodate letter and legal folders, as well as hanging file folders
- Media drawers with dividers are available for the storage of CDs, DVDs, cassettes, VHS tapes, small parts and hardware, and more
- Optional locking feature ensures security of stored items
- Works alone or with TambourDoor™



EasyRoller™ Systems

- Rollers protect books and archival boxes from the wear and tear of retrieving and replacing them on traditional stationary shelving
- Ideal for book, ledger, and courthouse storage applications
- Rollers glide easily for quick and easy access
- No tools or mounting hardware required for installation



Magazine Doors

- Designed to store the latest edition of a magazine in the front, while the previous editions are stored neatly behind the door on the shelf
- Door swings up and into the shelving unit, providing quick and easy access to materials that are stored behind it



Garment Rod

- Ideal for locker room or uniform storage
- Hang clothing or fabric samples for retail applications
- Strong construction provides durability



CDStor™

- Perfect for storing large quantities of CDs and organizing IT rooms
- Adjustable dividers for flexible storage

Book Divider

- Great for use with 4Post™ Library Shelving
- Keeps books upright and organized
- Heavy duty construction won't bend under weight of heavy books



Bin Divider

- Adjustable to create compartments for any size storage need
- Can be used for X-Ray jacket storage
- Adjustable on 2" centers and used in conjunction with heavy duty punched shelves



Pull Out Reference Shelf

- Provides a space efficient work station for quick reference without sacrificing valuable floor space
- Can be mounted on single or double entry shelving
- Glides smoothly on ball bearing suspensions for effortless and quiet usage

Back Panels

- Helps to prevent unwanted access on single entry units
- Provides an aesthetically pleasing back enclosure for single entry shelving used as stationary units in a MobileTrak® System
- Perfect for keeping loose parts and bin storage from falling behind the shelving



Upright Extension

- Adds extra space to the top of an existing unit when more storage is needed
- Excellent for stationary units and on MobileTrak® Systems
- Attaches easily to existing shelving

DISTRIBUTED BY:



Made In America!



Printed On
Recycled Paper

89 Church Road, PO Box 355 / Emigsville, PA 17318-0355

Factory / 800-828-8018 National / 800-FILING-1 (345-4641) Fax / 888-FILING-1

sales@datumfiling.com / www.datumfiling.com