

**Alpine Industries** 27 Selvage St. Irvington, NJ 07111 Tel: 973 601 5105 Fax: 973 854 8650

# Soap & hand Sanitizer Dispenser 425-GRY, 425-WHI

#### Installation

- Please choose a vertical, clean and smooth mounting surface. 1.
- 2. Make sure there is enough room above dispenser to access cover lock key.
- Unlock the front cover and take out the soap tank (Fig. 1). 3.
- Use the back plate for the drill marks and mark the 5 drill locations (Fig. 2). 4.
- Drill 5 holes at marked locations and insert 5 plastic anchors into drilled holes (Fig. 3). 5.
- Insert 4 screws into the 4 corner plastic anchors and leave 1/8" space from the wall under head for hanging dispenser (Fig. 4). 6.
- Hang the dispenser on the screws through the keyhole slots at back plate. 7.
- Insert anti theft screw (Fig. 5). 8.
- 9. Replace the soap tank and fill it up.

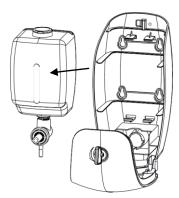



Figure 1



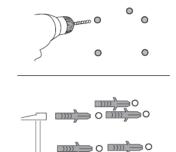


Figure 2



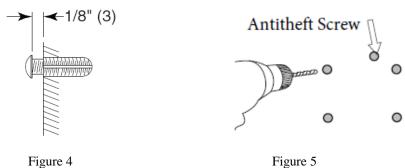


Figure 5

## Operation

- 1. Please choose soap with the right viscosity level (see specifications)
- 2. Fill the soap into the tank please do not overfill.

#### Maintenance

- 1. Please clean the dispenser by dry towel only. Do not immerse the soap dispenser in water or clean it under running water.
- 2. Use only fresh new liquid and clean the soap container properly before each re-fill. Deposits of old soap will lead to malfunction and jamming
- 3. This is an indoor product do not expose under the sunlight.

## Specifications

Soap Tank Capacity {fl. oz. (ml)}:	27 (800)	
Applicable Viscosity Range	100 cps to	2000 cps.